

REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fail outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fail outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended "communication opt in" warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 year's warranty.

ADDED BENEFITS

- In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:
- Discount voucher on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments - be the first to get the latest appliances
- Special offers on promotional items.

How to Register your Online Warranty?



- Open your internet browser and visit www.mellerware.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.



- Open your internet browser and visit www.creativehousewares.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.

Notes:

- The online warranty system is a safe storage facility for your receipt.
- You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
- From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
- All instructions on how to load your products are available inside your profile.
- Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
- For assistance with registration please email: help@chwsa.co.za

 
National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

Durban
243 Percy Osborn Road
Morningside, Durban, 4001, RSA
☎ +27 31 303 3465

creative housewares
20 Tafelberg Street, Parow, Cape Town, 7493, RSA
☎ PO Box 6156, Parow East, 7501, RSA
☎ +27 21 931 8117 | 📠 +27 63 014 0457
☎ +27 86 111 5006 | 📠 chousewares
🌐 www.creativehousewares.co.za

Johannesburg
25 & 26 San Croy Office Park
Agora Road, Croynod, 1619, RSA
☎ +27 11 392 5652

English
Dear Customer
Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

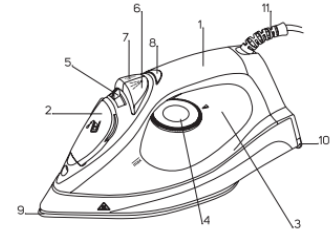

1. Parts description

- 1.Handle
- 2.Water inlet
- 3.Water tank
- 4.Temperature selection switch
- 5.Steam control / Self-cleaning lever
- 6.Spray button
- 7.Burst of steam button
- 8.Operation indicator light
- 9.Non-stick soleplate
- 10.Support base / cable reel
- 11.360° Swivel cord

2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

2.1. Use or working environment

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well-ventilated area.
- 2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
- 2.1.4. Keep children and bystanders away when using this appliance surface and away from other heat sources and contact with water.

- 2.1.5. Place the appliance on a horizontal, flat stable surface and away from the other heat sources and contact with water.
- 2.1.6. Keep the appliance away from flammable material such as textiles, curtains, cupboards or paper, etc.
- 2.1.7. Do not place the flammable material near the appliance.
- 2.1.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
- 2.1.9. Do not use the appliance if the cable or plug is damaged.
- 2.1.10. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.

- 2.1.11. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 10 amperes.
- 2.1.12. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.

- 2.1.13. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.
- 2.1.14. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.
- 2.1.15. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.
- 2.1.16. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
- 2.1.17. Do not wrap the power cord around the appliance.
- 2.1.18. Do not clip or crease the power cord.
- 2.1.19. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.
- 2.1.20. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
- 2.1.21. The appliance is not suitable for outdoor use.
- 2.1.22. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- 2.1.23. Do not touch the plug with wet hands.

2.2. Personal safety

- 2.2.1. **CAUTION:** Do not leave the appliance unattended during use as there is a risk of an accident.
- 2.2.2. Do not touch the heating parts of the appliance, as it may cause serious injury.
- 2.2.3. This appliance is only for domestic use, not for industrial or professional use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, hospitals, and other types of residential environments, even in farmhouses, areas of the kitchen staff in shops, office and other work environments.
- 2.2.4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.2.5. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- 2.2.6. Do not touch metal parts of the iron while it is in use, as it may cause serious burns.
- 2.2.7. The temperature of the accessible surfaces may be high when the appliance is in use.

- 2.2.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
- 2.2.9. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.2.10. Do not turn the appliance over while it is in use or connected to the mains power supply.
- 2.2.11. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.
- 2.2.12. This appliance should be stored out of reach of children.
- 2.2.13. Do not store the appliance if it is still hot.
- 2.2.14. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.2.15. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.2.16. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.2.17. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

 
- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER PUT THE FIRE OUT.
- 2.3.9. To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.
- 2.3.10. Respect the MAX level indicator (Fig. 1)

- 2.3. **Use and care**
- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.4. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.5. Insert the plug into the wall socket. The indicator light will illuminate.
- 2.3.6. When the indicator light switches off you may start ironing. **CAUTION:** Iron from low temperature first then move to high temperature fabrics. Should you need to iron at a low temperature, after using a high temperature you must wait for the pilot light to illuminate again, or you will burn your clothes onto the iron. This will void the warranty.
- 2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.8. If for some reason, the appliance were to catch fire



Spanish
Estimado cliente,
Gracias por elegir comprar un producto de la marca Mellerware. Gracias a su tecnología, diseño y funcionamiento, y al hecho de que supera los más estrictos estándares de calidad, puede garantizar un uso totalmente satisfactorio y una larga vida del producto.

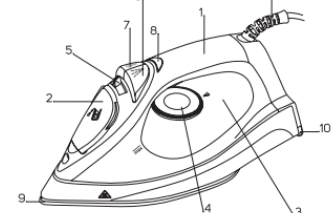

1. Descripción de las piezas
1. Manéjar
2. Entrada de agua
3. Tanque de agua
4. Interruptor de selección de temperatura
5. Control de vapor / palanca de autolimpieza
6. Botón de pulverización
7. Botón de ráfaga de vapor
8. Luz indicadora de funcionamiento
9. Suela antiadherente
10. Base de soporte / carrete de cable
11. Cable giratorio de 360°

2. Advertencias y advertencias de seguridad

Lea atentamente estas instrucciones antes de encender el aparato y consérvelas para consultarlas en el futuro. No seguir y observar estas instrucciones podría provocar un accidente. Limpiar todas las partes del producto que estarán en contacto con los alimentos, como se indica en el apartado de limpieza, antes de su uso.

2.1. Uso o entorno de trabajo:

- 2.1.1. Mantenga el área de trabajo limpia y bien iluminada. Las áreas desordenadas y oscuras invitan a los accidentes.
- 2.1.2. Utilice el aparato en un área bien ventilada.
- 2.1.3. No coloque el aparato sobre superficies calientes, como placas de cocción, quemadores de gas, hornos o elementos similares.
- 2.1.4. Mantenga a los niños y transeúntes alejados al usar la superficie de este aparato y lejos de otras fuentes de calor y contacto con el agua.
- 2.1.5. Coloque el aparato sobre una superficie horizontal, plana y estable, alejado de otras fuentes de calor y del contacto con el agua.
- 2.1.6. Mantenga el aparato alejado de materiales inflamables como textiles, cortinas, armarios o papel, etc.
- 2.1.7. No coloque material inflamable cerca del aparato.
- 2.1.8. No utilice el aparato junto con un programador, temporizador o otro dispositivo que lo encienda automáticamente.
- 2.1.9. No utilice el aparato si el cable o el enchufe están dañados.
- 2.1.10. Asegúrese de que el voltaje indicado en la etiqueta de clasificación coincida con el voltaje de la fuente de alimentación antes de enchufar el aparato.
- 2.1.11. Conecte el aparato con la red eléctrica con una toma de tierra que resista un mínimo de 10 amperios.

ENMETRE	TIPO DE TRÁTEL
	Não pode repassar em tecido
	Sintéticos, Nylon, Acrílico, Poliéster, Rayon
	Lã, Seda
	Algodão, Lino

3.3.3. Insérrez la fiche dans la prise murale. Le voyant lumineux s'allumera.

3.3.4. Lorsque le voyant s'éteint, vous pouvez commencer à repasser.

ATTENTION: Repassez d'abord à basse température, puis passez aux tissus à haute température. Si vous devez repasser à basse température, après avoir utilisé une température élevée, vous devez attendre que la veilleuse s'allume à nouveau, sinon vous brûlerez vos vêtements sur le fer. Cela annulera la garantie.

3.4. Repassage à sec:

- 3.4.1. Assurez-vous que le bouton de sélection de température est au niveau le plus bas.
 - 3.4.2. Placez le fer sur la base de support sur une surface stable et ferme.
 - 3.4.3. Branchez l'appareil à l'alimentation électrique et tournez le bouton de sélection de la température au niveau souhaité, le voyant lumineux prêt s'allumera.
 - 3.4.4. Une fois la lumière éteinte, vous pouvez commencer à repasser sur une surface stable et ferme.
 - 3.4.5. Lorsque vous avez terminé, ramenez le bouton de température au niveau le plus bas, débranchez l'alimentation électrique et attendez que l'appareil refroidisse complètement avant de procéder à son stockage.
 - IMPORTANT:** Si le fer contient de l'eau à l'intérieur du réservoir et que vous préférez le repassage à sec, placez le levier de commande de vapeur sur la position «0».
- #### 3.5. Repassage à la vapeur:
- 3.5.1. Assurez-vous que l'appareil est débranché de l'alimentation électrique, remplissez le réservoir d'eau. Assurez-vous de ne pas trop remplir le réservoir.
 - 3.5.2. Assurez-vous que le bouton de sélection de température est au niveau le plus bas, avant de brancher l'appareil.
 - 3.5.3. Posez le fer sur sa base de support sur une surface stable et ferme.
 - 3.5.4. Branchez le fer et réglez le levier de commande de vapeur sur le niveau moyen.
 - 3.5.5. Tournez le bouton de sélection de la température au niveau souhaité, adapté à la génération de vapeur et le voyant lumineux prêt doit s'allumer.
 - 3.5.6. Une fois la lumière éteinte, vous pouvez commencer à repasser sur une surface stable et ferme.
 - IMPORTANT:** Il est important de laisser la lumière s'allumer après avoir atteint la température optimale ; sinon l'appareil peut subir des fuites
 - 3.5.7. Une fois l'utilisation terminée, ramenez le bouton de sélection de la température au minimum, débranchez l'appareil de l'alimentation électrique et assurez-vous d'attendre qu'il refroidisse complètement avant de le ranger.
- POUR METTRE LE FER À VAPEUR À LA VAPEUR, LES TEMPÉRATURES ÉLEVÉES DEVENT ÊTRE SÉLECTIONNÉES SUR LE BOUTON INDICATEUR DE TEMPÉRATURE.**

3.6. Vaporisateur:

La pulvérisation des vêtements aide à lisser les plis pour faciliter le repassage.

- 2.1.12. El enchufe del aparato debe encajar correctamente en la toma de corriente. No modifique el enchufe.
- 2.1.13. Si usa un enchufe múltiple, verifique las calificaciones con cuidado, ya que la corriente utilizada por varios electrodomésticos podría exceder fácilmente la calificación del enchufe múltiple.
- 2.1.14. Si alguna de las carcacas del aparato se rompe, desconecte inmediatamente el aparato de la red eléctrica para evitar la posibilidad de una descarga eléctrica.
- 2.1.15. No utilice el aparato si se ha caído al suelo o si hay signos visibles de daño.
- 2.1.16. No fuerce el cable de alimentación. Nunca use el cable de alimentación para levantar, transportar o desenchufar el aparato.
- 2.1.17. No enrolle el cable de alimentación alrededor del aparato.
- 2.1.18. No corte ni doble el cable de alimentación.
- 2.1.19. No permita que el cable de alimentación cuelgue o entre en contacto con las superficies calientes del aparato.
- 2.1.20. Verifique el estado del cable de alimentación. Los cables dañados o enredados aumentan el riesgo de descarga eléctrica.
- 2.1.21. El aparato no es apto para uso en exteriores.
- 2.1.22. El cable de alimentación debe examinarse periódicamente para detectar signos de daños y, si está dañado, no debe utilizarse el aparato.
- 2.1.23. No toque el enchufe con las manos mojadas.

2.2. Seguridad personal

- 2.2.1. **PRECAUCIÓN:** No deje el aparato desatendido durante su uso, ya que existe el riesgo de un accidente.
- 2.2.2. No toque las partes calientes del aparato, ya que puede causar lesiones graves.
- 2.2.3. Este aparato es solo para uso doméstico, no para uso industrial o profesional. No está destinado a ser utilizado por huéspedes en entornos de hostelería como bed and breakfast, hoteles, moteles y otros tipos de entornos residenciales, incluso en granjas, áreas del personal de cocina en tiendas, oficinas y otros entornos de trabajo.
- 2.2.4. Este electrodoméstico no está diseñado para que lo utilicen personas (incluidos niños) con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento, a menos que hayan recibido supervisión o instrucciones sobre el uso del electrodoméstico por una persona responsable de su seguridad.
- 2.2.5. Este aparato no es un juguete. Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.
- 2.2.6. No toque las partes metálicas de la plancha mientras esté en uso, ya que puede causar quemaduras graves.
- 2.2.7. La temperatura de las superficies accesibles puede ser alta cuando el aparato está en uso.

2.3. Uso y cuidado

- 2.3.1. Desenrolle completamente el cable de alimentación del aparato antes de cada uso.
- 2.3.2. No utilice el aparato si las piezas o los accesorios no están instalados correctamente.
- 2.3.3. No dé la vuelta al aparato mientras esté en uso o conectado a la red eléctrica.
- 2.3.4. Desenchufe el aparato de la red eléctrica cuando no esté en uso y antes de realizar cualquier tarea de limpieza.
- 2.3.5. Este aparato debe guardarse fuera del alcance de los niños.
- 2.3.6. No guarde el aparato si todavía está caliente.
- 2.3.7. Nunca deje el aparato desatendido cuando esté en uso y manténgalo fuera del alcance de los niños.
- 2.3.8. Si por alguna razón el aparato se incendia, desconecte de la red eléctrica y NO USE AGUA PARA APAGAR EL FUEGO
- 2.3.9. Para mantener el tratamiento antiadherente en buen estado,

ENMETRE	TIPO DE TRÁTEL
	Não pode repassar em tecido
	Sintéticos, Nylon, Acrílico, Poliéster, Rayon
	Lã, Seda
	Algodão, Lino

3.6.1. Pointez la pointe du fer à l'endroit où vous souhaitez pulvériser l'eau et appuyez sur le bouton de pulvérisation.

3.6.2. Repassez le vêtement comme d'habitude.

Pour utiliser cette fonction, il sera nécessaire de remplir le réservoir d'eau.

3.7. Coup de vapeur

Le repassage à la vapeur réduit le temps de repassage et prend soin de l'appareil.

3.7.1. Appuyez sur le bouton jet de vapeur. Attendez quelques secondes que la vapeur pénètre dans les fibres du vêtement avant d'appuyer à nouveau sur le bouton. Pour une qualité de vapeur optimale, ne pas appliquer plus de trois jets successifs.

3.7.2. Le bouton de pulvérisation doit être enfoncé à plusieurs reprises pour libérer la première pulvérisation.

3.8. Repassage vertical:

Il est possible de repasser les rideaux suspendus, les vêtements sur leur propre cintre, etc. Pour ce faire, suivez les instructions ci-dessous:

- 3.8.1. Sélectionnez la température maximale du fer en tournant le régulateur de température du fer dans le sens des aiguilles d'une montre.
- 3.8.2. Repassez de haut en bas en appuyant sur le bouton de commande de vapeur. Important: pour le coton et le lin, il est recommandé de mettre la base du fer en contact avec la matière. Pour d'autres tissus plus délicats, il est recommandé de garder la base des quelques centimètres à l'écart.

3.9. Autonettoyant:

3.9.1. Il est important d'effectuer un auto-nettoyage de l'appareil au moins une fois par mois pour éliminer le calcium et les minéraux accumulés à l'intérieur du fer.

- 3.9.2. Remplissez le réservoir d'eau à son niveau maximum.
- 3.9.3. Placez le fer en position verticale, branchez-le sur le secteur et sélectionnez la température maximale.
- 3.9.4. Laissez l'appareil chauffer jusqu'à ce que le voyant s'éteigne.
- 3.9.5. Débranchez l'appareil et placez-le dans l'évier.
- 3.9.6. Laissez l'eau s'écouler par les événements de vapeur dans la base, tout en secouant légèrement l'appareil.
- 3.9.7. Relâchez le bouton après une minute ou lorsque le réservoir est vide.
- 3.9.8. Laissez le fer en position verticale jusqu'à ce qu'il ait refroidi.

3.10. Comment faire face à l'accumulation de tartre:

- 3.10.1. Pour que l'appareil fonctionne correctement, il doit être exempt de calcaire ou d'incrustations de magnésium causées par l'utilisation d'eau dure.
 - 3.10.2. Pour éviter ce genre de problème, nous recommandons l'utilisation d'une eau à faible minéralisation en calcaire ou en magnésium.
 - 3.10.3. Les solutions maison ne sont pas recommandées pour le détartrage de cet appareil, comme le vinaigre.
- #### 4. Nettoyage:
- 4.1. Débranchez l'appareil du secteur et laissez-le refroidir complètement avant d'entreprendre toute tâche de nettoyage.
 - 4.2. Nettoyez les parties extérieures de l'appareil avec un chiffon humide avec quelques gouttes de liquide vaisselle puis séchez. MISE EN GARDE! Ne plongez pas les parties électriques de l'appareil dans un liquide.
 - 4.3. N'utilisez pas de solvants ou de produits à pHacide ou basique tels que l'eau de Javel ou desproduits abrasifs pour nettoyer l'appareil.

no utilice sobre el utensilios metálicos o puntiaguados.

- 2.3.10. Respete el indicador de nivel MAX (Fig. 1).
- 2.3.11. Desenchufe el aparato de la red antes de rellenar el depósito de agua.
- 2.3.12. Para asegurarse de que la plancha funcione correctamente, mantenga la cara de la plancha lisa y no la golpee contra objetos metálicos (por ejemplo, la fuente de alimentación eléctrica y espere hasta que el aparato se enfríe por completo, antes de proceder a almacenarlo. **IMPORTANTE:** Si la plancha contiene agua dentro del tanque y prefiere planchar en seco, mueva la palanca de control de vapor a la posición "0".
- 2.3.13. Se recomienda el uso de agua destilada; especialmente si el agua en su área contiene algún tipo de arena o es "dura" (contiene calcio o magnesio).
- 2.3.14. La abertura de llenado de agua no debe dejarse abierta mientras se utiliza la plancha.

2.4. Servicio

- 2.4.1. Asegúrese de que el aparato sea reparado únicamente por un técnico debidamente calificado, y que solo se utilicen repuestos o accesorios originales para reemplazar las piezas/accesorios existentes.
- 2.4.2. Si el cable de alimentación está dañado, el fabricante o su agente de servicio, o una persona igualmente calificada, debe reemplazarlo para evitar un peligro.
- 2.4.3. Cualquier mal uso o incumplimiento de las instrucciones de uso anula la garantía y la responsabilidad del fabricante.

3. Instrucciones de uso

- 3.1. Antes de usar
 - 3.1.1. Retire la película protectora del aparato (si corresponde).
 - 3.1.2. Antes de usar el producto por primera vez, límpielo de la manera descrita en la sección de limpieza.
 - 3.1.3. La primera vez que se utiliza el aparato puededetectarse un humo ligero.
- #### 3.2. Llenado de agua
- 3.2.1. Desenchufe la plancha antes de llenar el depósito de agua.
 - 3.2.2. Sostenga la plancha en posición horizontal.
 - 3.2.3. Vierta agua lentamente a través de la entrada de agua.
 - 3.2.4. No llene más allá de la marca "MAX" en el tanque de agua.
- NOTA:** Su plancha está diseñada para usar agua del grifo, sin embargo, si el agua es muy dura, es recomendable usar agua destilada. El tanque de agua debe vaciarse después de cada uso.

3.3. Usar

- 3.3.1. Siempre verifique si una etiqueta con instrucciones de planchado está adherida a la prenda que se va a planchar. Siga estas instrucciones en todos los casos.
- 3.3.2. Gire el dial de control de temperatura para establecer la temperatura adecuada indicada en las instrucciones de planchado o en la etiqueta de la tela.

ENMETRE	TIPO DE TRÁTEL
	Não planchar em tecido
	Sintéticos, Nylon, Acrílico, Poliéster, Rayon
	Lã, Seda
	Algodão, Lino

3.3.3. Inserte el enchufe en la toma de pared. La luz indicadora se iluminará.

3.3.4. Cuando la luz indicadora se apague, puede empezar a planchar.

PRECAUCIÓN: Primero planche a baja temperatura y luego pase a telas de alta temperatura. Si necesita planchar a baja temperatura, después de usar una temperatura alta debe esperar a que el piloto se encienda nuevamente o quemará su ropa en la plancha. Esto anulará la garantía.

3.4. Planchado en seco

4.4. Ne plongez jamais l'appareil dans l'eau ou toutautre liquide et ne le placez jamais sous l'eau courante.

5. Stockage:

- 5.1. Assurez-vous d'éteindre le fer par le bouton désélection de température au niveau le plus bas.
- 5.2. Placez le fer en position verticale sur son supporté base et laissez-le refroidir complètement. Assurez-vous de vider le réservoir d'eau.
- 5.3. Enroulez doucement le cordon d'alimentation autour de son support de base et stockez le produit dans unendroit sec et frais, à l'abri de la lumière directe du soleil.

6. Anomalies et réparation:

 
- 6.1. Apportez l'appareil à un centre d'assistance agréé si le produit est endommagé ou si d'autres problèmes surviennent.
- 6.2. Si la connexion au secteur a été endommagée, elle doit être remplacée et vous devez procéder comme vous le feriez en cas de dommages.

7. Recyclage

7.1. Ces produits électriques, câbles, batteries, emballages et le manuel ne doivent pas être mélangés avec les déchets ménagers généraux. Pour un recyclage correct, veuillez apporter ces produits au bureau Creative Housewares le plus proche où ils seront acceptés pour recyclage gratuitement.

7.2. Sinon, veuillez contacter votre autorité locale ou le service d'élimination des déchets ménagers pour plus de détails sur le point de collecte désigné le plus proche. Une élimination correcte des produits permet d'économiser des ressources et de prévenir les effets négatifs sur la santé humaine et l'environnement.

Portuguese
Estimado cliente,
Obrigado por escolher comprar um produto da marca Mellerware. Graças à sua tecnologia, design e operação e ao facto de exceder os padrões de qualidade mais rigorosos, pode ser assegurado um uso totalmente satisfatório e uma longa vida útil do produto.

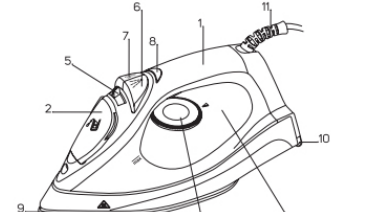

Descrição das peças

1. Alça
2. Entrada de água
3. Tanque de água
4. Interruptor de seleção de temperatura
5. Controlé de vapor / alavanca de autolimpieza
6. Botão de spray
7. Explosão do botão de vapor
8. Luz indicadora de operação
9. Base antiaderente
10. Base de suporte / carretel de cabo
11. Cabo giratório 360°

- 3.4.1. Asegúrese de que la perilla de selección de temperatura esté en el nivel más bajo.
- 3.4.2. Coloque la plancha sobre la base de soporte sobre una superficie firme y estable.
- 3.4.3. Enchufe el aparato a la fuente de alimentación eléctrica y gire la perilla de selección de temperatura al nivel deseado, la luz indicadora de listo se encenderá.
- 3.4.4. Una vez que la luz se apaga, puede comenzar a planchar sobre una superficie firme y estable.
- 3.4.5. Cuando haya terminado, gire la perilla de temperatura al nivel más bajo, desconecte de la fuente de alimentación eléctrica y espere hasta que el aparato se enfríe por completo, antes de proceder a almacenarlo. **IMPORTANTE:** Si la plancha contiene agua dentro del tanque y prefiere planchar en seco, mueva la palanca de control de vapor a la posición "0".

3.5. Planchado a vapor:

- 3.5.1. Asegúrese de que el aparato esté desenchufado de la red eléctrica, llene el depósito de agua. Asegúrese de no llenar demasiado el tanque.
- 3.5.2. Asegúrese de que la perilla de selección de temperatura esté en el nivel más bajo antes de enchufar el aparato.
- 3.5.3. Coloque la plancha sobre su base de soporte sobre una superficie firme y estable.
- 3.5.4. Enchufe la plancha y coloque la palanca de control de vapor en el nivel medio.
- 3.5.5. Gire la perilla de selección de temperatura al nivel deseado, adecuado para la generación de vapor y la luz indicadora de listo debe encenderse.
- 3.5.6. Una vez que la luz se apaga, puede comenzar a planchar sobre una superficie firme y estable.

IMPORTANTE: Es importante dejar que la luz se encienda después de alcanzar la temperatura óptima: De lo contrario, el aparato puede experimentar fugas.

- 3.5.7. Una vez que haya terminado su uso, vuelva a girar la perilla de selección de temperatura al mínimo, desenchufe el aparato de la fuente de alimentación eléctrica y asegúrese de esperar hasta que se enfríe por completo antes de guardarlo.
- PARA HACER VAPOR DE HIERRO, SE DEBEN SELECCIONAR ALTAS TEMPERATURAS EN LA PERILLA INDICADORA DE TEMPERATURA.**

3.6. Rociar

Rociar las prendas ayuda a suavizar las arrugas para facilitar el planchado.

3.6.1. Apunta la punta de la plancha hacia donde quieras rociar el agua y presiona el botón de rociar.

3.6.2. Plancha la prenda como de costumbre. Para utilizar esta función, será necesario llenar el depósito de agua.

3.7. Ráfaga de vapor

El planchado a vapor reduce el tiempo de planchado y cuida el aparato.

3.7.1. Presione el botón de ráfaga de vapor. Espere unos segundos hasta que el vapor penetre en las fibras de la prenda antes de volver a presionar el botón. Para una calidad de vapor óptima, no aplique más de tres ráfagas sucesivas.

3.7.2. El botón de pulverización debe presionarse repetidamente para liberar la primera pulverización.

3.8. Planchado vertical

Es posible planchar cortinas colgantes, prendas de vestir en su propia percha, etc. Para hacerlo, siga las siguientes instrucciones:

- 3.8.1. Seleccione la temperatura máxima de la plancha girando el regulador de temperatura de la plancha en el sentido de las agujas del reloj.
- 3.8.2. Plancha de arriba a abajo mientras presiona el botón de control de vapor. Importante: para algodón y lino, se recomienda

em quintas, áreas de pessoal de cozinha em lojas, escritórios e outros ambientes de trabalho.

3.2.2. Este aparelho não se destina a ser utilizado por pessoas (incluindo crianças) com capacidades físicas, sensoriais ou mentais reduzidas ou com falta de experiência e conhecimento, a menos que tenham recebido supervisão ou instruções sobre a utilização do aparelho por uma pessoa responsável pela sua segurança.

2.2.5. Este aparelho não é um brinquedo. As crianças devem ser supervisionadas para garantir que não brinquem com o aparelho.

2.2.6. Não toque nas partes metálicas do ferro enquanto estiver em uso, pois pode causar queimaduras graves.

2.2.7. A temperatura das superfícies acessíveis pode ser elevada quando o aparelho está em uso.

2.1. Uso ou ambiente de trabalho:

- 2.1.1. Mantenha a área de trabalho limpa e bem iluminada. Áreas desordenadas e escuras são um convite a acidentes.
- 2.1.2. Use o aparelho em uma área bem ventilada.
- 2.1.3. Não coloque o aparelho sobre superfícies quentes, como placas de cozinha, queimadores a gás, fornos ou itens semelhantes.
- 2.1.4. Mantenha crianças e espectadores afastados quando usar a superfície deste aparelho e longe de outras fontes de calor e do contato com a água.
- 2.1.5. Coloque o aparelho sobre uma superfície horizontal, plana e estável, longe de outras fontes de calor e do contato com água.
- 2.1.6. Mantenha o aparelho longe de materiais inflamáveis, como tecidos, cortinas, armários ou papel, etc.
- 2.1.7. Não coloque o material inflamável perto do aparelho.
- 2.1.8. Não use o aparelho em associação com um programador, cronômetro ou outro dispositivo que o liga automaticamente.
- 2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.

2.1.10. Certifique-se de que a voltagem indicada na etiqueta de classificação corresponde à voltagem da fonte de alimentação antes de conectar o aparelho.

- 2.1.11. Ligue o aparelho à rede de alimentação com uma tomada de terra que suporte um mínimo de 10 amperes.
- 2.1.12. O plugue do aparelho deve se encaixar corretamente na tomada da rede elétrica. Não altere o plugue.
- 2.1.13. Se estiver usando um plugue múltiplo, verifique as classificações com cuidado, pois a corrente usada por vários aparelhos pode facilmente exceder a classificação do plugue múltiplo.
- 2.1.14. Se alguma das carcacas do aparelho quebrar, desconecte imediatamente o aparelho da fonte de alimentação para evitar a possibilidade de um choque elétrico.
- 2.1.15. Não use o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
- 2.1.16. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, carregar ou desconectar o aparelho.
- 2.1.17. Não enrolle o cabo de alimentação em volta do aparelho.
- 2.1.18. Não prenda ou amasse o cabo de alimentação.
- 2.1.19. Não permita que o cabo de alimentação pendure ou entre em contato com as superfícies quentes do aparelho.
- 2.1.20. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
- 2.1.21. O aparelho não é adequado para uso ao ar livre.
- 2.1.22. O cabo de alimentação deve ser examinado regularmente quanto a sinais de danos e, se o cabo estiver danificado, o aparelho não deve ser usado.
- 2.1.23. Não toque no plugue com as mãos molhadas.

2.2. Segurança pessoal:

- 2.2.1. **CUIDADO:** Não deixe o aparelho sem vigilância durante o uso, pois há risco de acidente.
- 2.2.2. Não toque nas peças de aquecimento do aparelho, pois pode causar ferimentos graves.
- 2.2.3. Este aparelho destina-se apenas a uso doméstico, não a uso industrial ou profissional. Não se destina a ser utilizado por hóspedes em ambientes de hospitalidade como bed and breakfast, hotéis, moteis e outros tipos de ambientes residenciais, mesmo



poner la base de la plancha en contacto con el material. Para otros tejidos más delicados, se recomienda mantener la base de los unos centímetros alejada.

3.9. Autolimpante

- 3.9.1. Este aparato autolimpia el aparato al menos una vez al mes para eliminar el calcio y los minerales acumulados en el interior de la plancha.
- 3.9.2. Llene el tanque de agua hasta su nivel máximo.
- 3.9.3. Coloque la plancha en posición vertical, enchúfela a la red y seleccione la temperatura máxima.
- 3.9.4. Deje que el aparato se caliente hasta que se apague la luz indicadora.
- 3.9.5. Desenchufe el aparato y colóquelo en el fregadero.
- 3.9.6. Deje que el agua fluya a través de los orificios de ventilación de la base mientras agita ligeramente el aparato.
- 3.9.7. Suelte el botón después de un minuto o cuando el tanque se vacíe.
- 3.9.8. Deje la plancha en posición vertical hasta que se enfríe.

3.10. Cómo lidiar con la acumulación de sarro

- 3.10.1. Para que el aparato funcione correctamente, debe mantenerse libre de incrustaciones de cal o de magnesio provocadas por el uso de agua dura.
- 3.10.2. Para prevenir este tipo de problemas, recomendamos el uso de agua con baja mineralización de cal o magnesio.
- 3.10.3. No se recomiendan las soluciones caseras para descalcificar este aparato, como el vinagre.

4. Limpieza

- 4.1. Desconecte el aparato de la red eléctrica y dejeque se enfríe por completo antes de realizar cualquiertarea de limpieza.
- 4.2. Limpiar las partes externas del aparato con unpaño húmedo con unas gotas de lavavajillas y lejessoscar. **PRECAUCIÓN!** No sumerja las partes eléctricasdel aparato en ningún líquido.
- 4.3. No utilice productos o productos con pH ácido obásico como lejía o productos abrasivos para limpiar el aparato.
- 4.4. Nunca sumerja el aparato en agua o cualquier otroliquido ni lo coloque bajo el chorro de agua.

5. Almacenamiento

- 5.1. Asegúrese de apagar la plancha con la perilla de selección de temperatura al nivel más bajo.
- 5.2. Coloque la plancha en posición vertical sobre su soporte base y déjala enfriar completamente. Asegúrese de vaciar el tanque de agua.
- 5.3. Enrolle el cable de alimentación con cuidado alrededor de su soporte base y guarde el producto en un lugar seco y fresco, alejado de la luz solar directa.

 
6. Anomalías y reparación

- 6.1. Lleve el aparato a un centro de soporte autorizado si el producto está dañado o si surgen otros problemas.
- 6.2. Si la conexión a la red se ha dañado, debe ser reemplazada y debe proceder como lo haría en caso de daño.

7. Reciclaje

7.1. Estos productos eléctricos, cables, baterías, embalajes y el manual no deben mezclarse con la basura doméstica general. Para un reciclaje adecuado, lleve estos productos a la oficina de Creative Housewares más cercana, donde serán aceptados para reciclaje sin cargo.

7.2. Alternativamente, comuníquese con su autoridad local o con el servicio de eliminación de residuos domésticos para obtener más detalles sobre el punto de recolección designado más cercano. La eliminación correcta del producto ahorra recursos y evita efectos negativos en la salud humana y el medio ambiente.

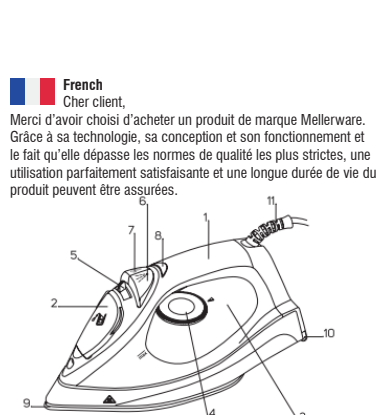

1. Description des pièces

1. Poignée
2. Entrée d'eau
3. Réservoir d'eau
4. Sélecteur de température
5. Commande vapeur / Levier autonettoyant
6. Bouton de pulvérisation
7. Bouton rafale de vapeur
8. Voyant de fonctionnement
9. Semelle antiadhésive
10. Base de support / enrouleur de câble
11. Cordon pivotant à 360°

2. Conseils de sécurité et avertissements!

Lisez attentivement ces instructions avant d'allumer l'appareil et conservez-les pour référence future. Ne respectez et l'observation de ces instructions peuvent entraîner un accident. Nettoyez toutes les parties du produit qui seront en contact avec les aliments, comme indiqué dans la section nettoyage, avant utilisation.

2.1. Utilisation ou environnement de travail

- 2.1.1. Gardez la zone de travail propre et bien éclairée. Les zones encombrées et sombres invitent aux accidents.
- 2.1.2. Utilisez l'appareil dans un endroit bien aéré.
- 2.1.3. Ne placez pas l'appareil sur des surfaces chaudes, telles que des plaques de cuisson, des brûleurs à gaz, des fours ou des articles similaires.
- 2.1.4. Tenez les enfants et les spectateurs éloignés lors de l'utilisation de cette surface de l'appareil et à l'écart des autres sources de chaleur et du contact avec l'eau.
- 2.1.5. Placez l'appareil sur une surface horizontale, plane et stable, à l'écart des autres sources de chaleur et du contact avec l'eau.

2.1.6. Tenez l'appareil à l'écart des matériaux inflammables tels que textiles, rideaux, armoirs ou papier, etc.

- 2.1.7. Ne placez pas de matériau inflammable à proximité de l'appareil.
- 2.1.8. N'utilisez pas l'appareil en association avec un programateur, une minuterie ou tout autre appareil qui l'allume automatiquement.
- 2.1.9. N'utilisez pas l'appareil si le câble ou la fiche est endommagé.

- 3.2.1. Desligue o ferro antes de encher o tanque de água.
 - 3.2.2. Segure o ferro na posição horizontal.
 - 3.2.3. Despeje água lentamente pela entrada de água.
 - 3.2.4. Não encha além da marca "MAX" no tanque de água.
- NOTA:** O seu ferro foi concebido para usar água da torneira, no entanto, se a água for muito dura, é aconselhável usar água destilada. O tanque de água deve ser esvaziado após cada uso.

3.3. Usar:

- 3.3.1. Verifique sempre se uma etiqueta com as instruções para passar a ferro está afixada na peça de roupa a ser passada. S