



REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim, and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim, and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended “communication opt in” warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 year's warranty.

ADDED BENEFITS

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Discount voucher on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments - be the first to get the latest appliances
- Special offers on promotional items

How to Register your Online Warranty?



- Open your internet browser and visit www.mellerware.co.za
- Click on the “Register” link and create your username and password. Or if you have done this already login with your username and password.
- Click on “Register your Warranty” and follow the easy instructions.
- Scan and upload your receipt.

- Open your internet browser and visit www.creativehousewares.co.za
- Click on the “Register” link and and create your username and password. Or if you have done this already login with your username and password.
- Click on “Register your Warranty” and follow the easy instructions.
- Scan and upload your receipt.

Notes:

1. The online warranty system is a safe storage facility for your receipt.
2. You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
4. All instructions on how to load your products are available inside your profile.
5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
6. For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

Durban
20 Tekstil Street, Parow, Cape Town, 7493, RSA
PO Box 6156, Parow East, 7501, RSA
+27 21 931 8117 | +27 63 014 0457
+27 86 111 5006 | www.creativehousewares.co.za




Before returning your product, check the following:

- Your household mains supply socket is in good condition, working and switched on.
- The mains supply circuit is not overloaded (white trip switch on your DB board is off).
- You have read the trouble shooting guide in your Instructions for Use.
- All accessories and parts are present.

The following conditions apply:

1. Please ensure you retain your original receipt as this must be presented when making a claim under the terms of the warranty. It is impossible to determine the warranty period without proof of purchase, so please keep this in a safe place. (NB: Your original receipt can be scanned onto the Mellerware website [www.mellerware.co.za] or Creative Housewares (Pty) Ltd [www.creativehousewares.co.za] for safe storage.)
2. If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the warranty void. Any refund or exchange remains at the brands discretion beyond the implied warranty granted by the CPA.
3. Upon receipt of your appliance, check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The warranty is void if products are damaged after use, so please do not use a damaged product.
4. Any alteration made to the appliance purchased will void the warranty. Your product is designed for normal domestic household use. Failure to

Spanish
Estimado cliente, Gracias por elegir comprar un producto de la marca Mellerware. Gracias a su tecnología, diseño y funcionamiento, y al hecho de que supera los más estrictos estándares de calidad, puede garantizarse un uso totalmente satisfactorio y una larga vida del producto.

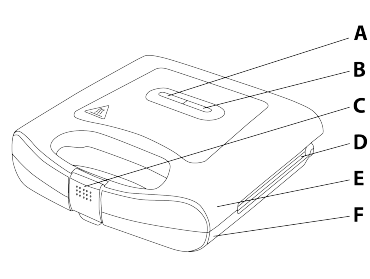

Descripción de las piezas

A. Lámpara de encendido
B. Lámpara de listo
C. Clip de manija
D. Placa de cocción
E. Carcasa superior
F. Carcasa inferior

1. ¡Consejos y advertencias de seguridad!

Al usar aparatos eléctricos, siempre se deben seguir las precauciones básicas de seguridad, incluidas las siguientes:

1.1. Leer instrucciones antes de usar
1.2. No toque las superficies calientes. Utilice manijas o perillas.
1.3. Para protegerse contra descargas eléctricas, no sumerja el cable, los enchufes o el aparato en agua u otro líquido.
1.4. Desenchúfelo del tomacorriente cuando no esté en uso y antes de limpiarlo. Deje que se enfríe antes de poner o quitar piezas.
1.5. No opere ningún electrodoméstico con un cable o enchufe dañado, después de que el electrodoméstico funcione mal o se haya dañado de alguna manera. No hay piezas reparables por el usuario en el interior. Devuelva el aparato al centro de servicio autorizado más cercano o llame a nuestro número gratuito de servicio al cliente para obtener información sobre la revisión,

lorsqu'il n'est pas utilisé et avant d'entreprendre toute tâche de nettoyage.

3.7. Cet appareil doit être rangé hors de portée des enfants.
3.8. Ne laissez jamais l'appareil sans surveillance au risque de prendre feu, débranchez-le de l'alimentation secteur et N'UTILISEZ PAS D'EAU POUR ÉTEINDRE LE FEU.

4. Services:

4.1. Assurez-vous que seul un technicien dûment qualié et que seules des pièces de rechange d'origine pour l'entretien de l'appareil ou des accessoires sont utilisés pour remplacer les pièces/accessoires existants.
4.2. Si le cordon d'alimentation est endommagé, le fabricant ou son agent de service ou une personne de qualification similaire doit le remplacer afin d'éviter tout danger.
4.3. Toute mauvaise utilisation ou non-respect des instructions d'utilisation annule la garantie et la responsabilité du fabricant.

5. Fonctionnement:

5.1. Glacez légèrement les deux plaques chauffantes avec une petite quantité d'huile végétale ou un spray antiadhésif, et fermez le boîtier pour que la machine à sandwich chauffe.
5.2. Le voyant d'alimentation s'allume lorsque la fiche est connectée à la prise principale ; il restera allumé pendant le préchauffage, le voyant prêt s'allumera lorsque l'appareil aura préchauffé.
ATTENTION : Toujours préchauffer avant utilisation.
5.3. Commencez à chauffer. Après environ 3 minutes, le voyant rouge s'éteint, indiquant que la machine à sandwich est prête à l'emploi.
5.4. Préparez les sandwiches en beurrant le pain sur la surface extérieure et en plaçant les ingrédients désirés à l'intérieur. Soulevez le loquet de sécurité et ouvrez la machine à sandwich. Déposer sur les plaques chauffantes.
ATTENTION : La surface de cuisson est chaude, manipulez-la avec précaution.
5.5. Fermez le boîtier pour vous assurer que le sandwich est placé uniformément. Verrouillez le cran de sécurité. Les temps de cuisson normaux seront de 3 à 6 minutes pour chaque sandwich. Le voyant rouge s'allumera et s'éteindra, car le thermostat maintient la machine à sandwich à la bonne température de cuisson.

1.6. El uso de accesorios no recomendados por el fabricante del aparato puede causar lesiones.
1.7. No lo use al aire libre.
1.8. No permita que el cable cuelgue del borde de la mesa o mostrador, ni que toque superficies calientes.
1.9. No lo coloque sobre o cerca de un quemador de gas o eléctrico caliente, ni en un horno caliente.
1.10. Para precalentar la unidad unos 2 minutos antes de usar.
1.11. Este aparato es solo para uso doméstico.
1.12. Es necesaria una estrecha supervisión cuando cualquier aparato es utilizado por niños o cerca de ellos.
1.13. No utilice la unidad cerca de gas u otros materiales inflamables (como benceno, diluyente de pintura, aerosoles, etc.)
1.14. Advertencia: No utilice este aparato cerca del agua.
1.15. Este producto no debe usarse en las inmediaciones del agua, como bañeras, lavabos, piscinas, etc., donde podría ocurrir una inmersión o salpicaduras.
1.16. El uso de aditamentos o accesorios no recomendados o vendidos por el distribuidor del producto puede ocasionar peligros o lesiones personales o materiales.
1.17. No deje el aparato desatendido cuando esté encendido.
1.18. No utilice el aparato para otro uso que no sea el previsto.
1.19. Siempre conecte primero el enchufe al aparato, luego enchufe el cable en el tomacorriente de la pared.
1.20. Para desconectar, retire el enchufe del tomacorriente de la pared.
1.21. Se debe tener mucho cuidado al mover un aparato que contenga aceite caliente u otros líquidos calientes.
1.22. El aparato solo debe utilizarse en la posición cerrada.

2. Seguridad personal:

2.1. Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante, su agente de servicio o personas calificadas de manera similar para evitar un peligro.
2.2. Las personas (incluidos los niños) con capacidades físicas, sensoriales o mentales reducidas o falta de experiencia y conocimiento no deben utilizar este aparato, a menos que una persona responsable de su

ATTENTION : L'appareil ne doit pas être utilisé en position ouverte.

5.6. Retirer les sandwichs des plaques chauffantes à l'aide d'une spatule en plastique ou en bois. Soyez prudent avec vos sandwichs, les garnitures seront assez chaudes. Laissez refroidir quelques minutes avant de déguster.
5.7. Débranchez le cordon d'alimentation après la cuisson et laissez refroidir la machine à sandwich.

6. Entretien:

6.1. Cet appareil nécessite peu d'entretien. Il ne contient aucune pièce réparable par l'utilisateur. N'essayez pas de le réparer vous-même. Confiez-le à un personnel qualifié si un entretien est nécessaire.

7. Nettoyage:

7.1. Débranchez toujours cette machine à sandwich de la source d'alimentation et attendez qu'elle refroidisse avant de la nettoyer.
7.2. Il n'est pas nécessaire de démonter votre appareil à sandwich pour le nettoyer, séchez-le avec une serviette en papier pour absor