

REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT-IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended "communication opt in" warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 year's warranty.

ADDED BENEFITS

- In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:
- Discount voucher on product warranty registration
 - Incentives and Competitions for registered users
 - New recipes or ideas for your products
 - New product developments – be the first to get the latest appliances
 - Special offers on promotional items

How to Register your Online Warranty?



DESKTOP/
LAPTOP

- Open your internet browser and visit www.mellerware.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.



SMART PHONE/
TABLET

- Open your internet browser and visit www.creativehousewares.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.

Notes:

1. The online warranty system is a safe storage facility for your receipt.
2. You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
4. All instructions on how to load your products are available inside your profile.
5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
6. For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za


Durban creative housewares 20 Tokelst Street, Parow, Cape Town, 7493, RSA P O Box 6156, Parow East, 7501, RSA ☎ +27 21 931 8117 📠 +27 63 014 0457 📞 +27 86 111 5006 🏠 chousewares 🌐 www.creativehousewares.co.za	Johannesburg 25 & 26 San Croy Office Park ☎ Agora Road, Croydon, 1619, RSA +27 11 392 5652 🌐
---	--



English

Dear Customer

Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

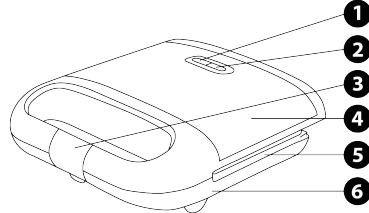

Parts description

1. Power lamp
2. Ready lamp
3. Handle clip
4. Top housing
5. Cooking plate
6. Bottom housing

1. Safety advice and warnings!

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.1. Read all instructions before using
- 1.2. Do not touch hot surfaces. Use handles or knobs.
- 1.3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- 1.4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 1.5. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. No user serviceable parts inside. Return appliance to the nearest authorized service facility or call our toll free customer service number for information on examination, repair, or adjustment.
- 1.6. The use of accessory attachments not recommended by the appliance manufacturer may cause

injuries.

- 1.7. Do not use outdoors.
- 1.8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 1.9. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 1.10. Preheat the unit about 2 minutes before using.
- 1.11. This appliance is for household use only.
- 1.12. Close supervision is necessary when any appliance is used by or near children.
- 1.13. Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.)
- 1.14. Warning: Do not use this appliance near water.
- 1.15. This product should not be used in the immediate vicinity of water, such as bathtub, wash-bowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- 1.16. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- 1.17. Do not leave the appliance unattended when switched on.
- 1.18. Do not use appliance for other than intended use.
- 1.19. Always attach plug to appliance first, then plug cord in the wall outlet.
- 1.20. To disconnect, remove plug from wall outlet.
- 1.21. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 1.22. The appliance is only to be operated in the closed position.

2. Personal safety:

- 2.1. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 2.2. Persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge do not intend this appliance for use, unless a person responsible for their safety has given them supervision or instruction concerning use of the appliance.
- 2.3. Children should be supervised to ensure that they do not play with the appliance.

- 2.4. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- 2.5. The temperature of accessible surfaces may be high when the appliance is operating.
- 2.6. Caution: Do not leave the appliance unattended during use, as there is a risk of an accident.
- 2.7. Do not touch the heated parts of the appliance, as it may cause serious burns.
- 2.8. This appliance is only for domestic use, not for industrial or professional use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels and other types of residential environments, even in farmhouses, areas of the kitchen staff in shops, offices and other work environments.
- 2.9. Persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge should not use the appliance, unless a person responsible for their safety has given them supervision or instruction concerning use of the appliance.
- 2.10. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

3. Use and Care:

- 3.1. Fully unroll the appliance's power cable before each use.
- 3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 3.3. Do not use the appliance when empty
- 3.4. Do not turn the appliance over while it is in use or connected to the mains power supply.
- 3.5. Do not cover the surface or food with aluminium foil and other similar materials.
- 3.6. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.
- 3.7. This appliance should be stored out of reach of children.
- 3.8. Never leave the appliance unattended were to catch fire, disconnect from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT.

4. Service:

- 4.1. Make sure that only suitably qualified technician, and that only original spare parts service

the appliance or accessories are used to replace existing parts/accessories.

- 4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
- 4.3. Any misuse or failure to follow the instructions for use renders the warranty and manufacturer's liability null and void.

5. Operation:

NOTE: When using the Sandwich Maker for the first time, after unpacking your Sandwich Maker, open the lid, clean the cooking surfaces thoroughly by whipping with a damp sponge and dry the surfaces with a paper towel. For best results, prepare the non-stick surfaces by using a paper towel to wipe a thin layer of vegetable shortening or oil onto the non-stick surfaces of the Sandwich Maker.

CAUTION: Always use protective, heat-resistant, gloves or mitts when handling this product to avoid steam or other burns.

- 5.1. Always preheat before use. Plug cord into a rating 220-240-volt AC power outlet while preparing the fillings.
- 5.2. The indicator light will illuminate when the plug is connected to the main outlet; it will stay on during preheating, ready light will turn on when appliance has preheated.
- CAUTION:** Always preheat before use.
- 5.3. Lightly glaze both heating plates with a small amount of vegetable oil or a non-stick spray and close the casing for the sandwich maker to heat up.
- 5.4. Begin heating. After about 3 minutes, the red light will turn off, indicating that the sandwich maker is ready for use.
- 5.5. Prepare sandwiches by buttering bread on outer surfaces and placing desired ingredients within. Lift safety catch and open the sandwich maker. Place sandwiches on the heating plates.
- CAUTION:** cooking surface is hot; handle with care.
- 5.6. Close the casing to ensure that the sandwich is placed evenly. Lock the safety catch. Normal cooking times will be 3–6 minutes for each sandwich. The red light will turn on and off, as the thermostat keeps the sandwich maker at the proper baking temperature.

- verantwoordelik vir hul veiligheid hulle toegesig gegee het of instruksies oor die gebruik van die toestel gegee het.
- 2.3. Kinders moet onder toesig wees om te verseker dat hulle nie met die toestel speel nie.
 - 2.4. Die toestel is nie bedoel om deur middel van 'n eksterne tydhouer of aparte afstand beheerstelsel gebruik te word nie.
 - 2.5. Die temperatuur van toeganklike oppervlaktes kan hoog wees wanneer die toestel in werking is.
 - 2.6. Waarskuwing: Moenie die toestel sonder toesig laat tydens gebruik nie, aangesien daar 'n risiko van 'n ongeluk is.
 - 2.7. Moenie aan die verhitte dele van die toestel raak nie, aangesien dit ernstige brandwonde kan veroorsaak.
 - 2.8. Hierdie toestel is slegs vir huishoudelike gebruik, nie vir industriële of professionele gebruik nie. Dit is nie bedoel om deur gaste in gasvryheids omgewings soos bed-en-ontbyt, hotelle, motelle en ander tipe woon omgewings gebruik te word nie, selfs in plaashuise, areas van die kombuis personeel in winkels, kantore en ander werksomgewings.
 - 2.9. Persone (insluitend kinders) met verminderde fisiese, sensoriese of geestelike vermoëns of 'n gebrek aan ervaring en kennis beoog nie die toestel vir gebruik nie, tensy 'n persoon wat verantwoordelik is vir hul veiligheid aan hulle toegesig gegee het of instruksies oor die gebruik van die toestel gegee het.
 - 2.10. Hierdie toestel is nie 'n speelding nie. Kinders moet onder toesig wees om te verseker dat hulle nie met die toestel speel nie.

3. Gebruik en sorg:

- 3.1. Rol die toestel se kragkabel volledig uit voor elke gebruik.
- 3.2. Moenie die toestel gebruik as die onderdele of bykomstighede nie behoorlik pas nie.
- 3.3. Moenie die toestel gebruik wanneer dit leeg is nie
- 3.4. Moenie die toestel omdraai terwyl dit in gebruik is of aan die hoofkragtoevoer gekoppel is nie.
- 3.5. Moenie die oppervlak of kos met aluminium foelie en ander soortgelyke materiale bedek nie.
- 3.6. Ontkoppel die toestel van die hoofkragtoevoer wanneer dit nie gebruik word nie en voordat enige skoonmaak taak onderneem word.

CAUTION: The appliance is not to be operated in the open position.

- 5.7. Remove the sandwiches from the heating plates with a plastic or wooden spatula. Be careful with your sandwiches, the fillings will be quite hot. Allow to cool for a few minutes before enjoying.
- 5.8. Unplug the power supply cord after cooking and allow the sandwich maker to cool down.

6. Maintenance:

6.1. This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

7. Cleaning:

- 7.1. Always unplug this sandwich maker from the power source and wait until it cools down before cleaning.
- 7.2. There is no need to take your sandwich maker apart for cleaning, dry with a paper towel to absorb excess oil. Brush crumbs from grooves, and wipe with a damp cloth and mild soap.
- 7.3. Never immerse in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
- 7.4. Do not use cleansers or oven cleaners on the heating plates.
- 7.5. To clean handles and other parts, use a damp cloth with mild soap.
- 7.6. Should any filling be difficult to remove, pour a little cooking oil onto the plates and wipe off after 5 minutes, when the filling has softened.

CAUTION: DO NOT IMMERSE IN WATER.

- 1.1 Lees alle instruksies voor gebruik
- 1.2. Moenie aan warm oppervlaktes raak nie. Gebruik handvatsels of knoppe.
- 1.3. Om teen elektriese skok te beskerm, moenie koord, proppe of toestel in water of ander vloeistof dompel nie.
- 1.4. Ontkoppel van krag toevoer wanneer dit nie gebruik word nie en voor skoonmaak. Laat afkoel voor jy dele aan- of afhaal.
- 1.5. Moenie enige toestel met 'n beskadigde koord of prop gebruik nadat die toestel wanfunksioneer het of op enige manier beskadig is nie. Geen gebruiker-diensbare onderdele binne nie. Stuur toestel terug na die naaste gemagtigde diensfasiliteit of skakel ons tolvrye kliënte diensnommer vir inligting oor onderzoek, herstel of aanpassing.
- 1.6. Die gebruik van bykomstighede wat nie deur die toestelvervaardiger aanbeveel word nie, kan

- 5.4. Begin met verhitting. Na sowat 3 minute sal die rooi lig uitgaan, wat aandui dat die toebroodjemaker gereed is vir gebruik.
- 5.5. Berei toebroodjies deur die buitekante van die brood met botter te besmeer en gewenste bestandele binne te plaas. Lig die veiligheidsklamp op en maak die toebroodjemaker oop. Plaas die toebroodjies op die verhittingsplate.
- VOORSIGTIGHEID:** Kookoppervlak is warm; hanteer met sorg.
- 5.6. Maak die omhulsel toe om seker te maak dat die toebroodjie eweredig geplaas is. Sluit die veiligheidsklamp. Normale gaartye sal 3–6 minute vir elke toebroodjie wees. Die rooi lig sal aan-aan-aan afdraai, terwyl die termostaat die toebroodjemaker by die regte bakte temperatuur hou.
- VOORSIGTIGHEID:** Die toestel mag nie in die oop posisie bedryf word nie.
- 5.7. Verwyder die toebroodjies van die verhittingsplate met 'n plastiese of hout spatel. Wees versigtig met jou toebroodjies, die vulsels sal nogal warm wees. Laat dit vir 'n paar minute afkoel voordat jy dit geniet.
- 5.8. Trek die kragvoorsieningsnoer uit na kook en laat die toebroodjemaker afkoel.

4. Diens:

- 4.1. Maak seker dat slegs toepaslik gekwalifiseerde tegnikus, en dat slegs oorspronklike onderdele diens die toestel of bykomstighede gebruik word om bestaande onderdele/bykomstighede te vervang.
- 4.2. Indien die kragkoord beskadig is, moet die vervaardiger of sy diensagent of 'n soortgelyke gekwalifiseerde persoon dit vervang om 'n gevaar te vermy.
- 4.3. Enige misbruik of versuim om die gebruiksinstruksies te volg maak die waarborg en vervaardiger se aanspreeklikheid nietig.

5. Hoe om te gebruik:

LET WEL: Wanneer jy die Toebroodjemaker vir die eerste keer gebruik, nadat jy dit uitgepak het, maak die deksel oop, skoon die kookoppervlaktes deeglik deur dit met 'n klam spons af te vee, en droog die oppervlaktes met 'n papierhanddoek. Vir die beste resultate, berei die nie-plak oppervlaktes voor deur 'n dun laag groentesmors of olie met 'n papierhanddoek op die nie-plak oppervlaktes van die Toebroodjemaker af te vee.

VOORSIGTIGHEID: Gebruik altyd beskermende hittebestande handskoene of oondwant wanneer jy hierdie produk hanteer om stoom- of ander brandwonde te voorkom.


- 5.1. Verhit altyd voor gebruik. Steek die snoer in 'n 220-240-volt-wisselstroomkragpunt terwyl jy die vulsels voorberei.
- 5.2. Die aanduiding sal oplig wanneer die prop met die hoofkragpunt verbind is; dit bly aan tydens verhitting, en die gereedlig sal aanskakel wanneer die toestel verhit is.
- VOORSIGTIGHEID:** Verhit altyd voor gebruik.
- 5.3. Glans beide verhittingsplate lig met 'n klein hoeveelheid groentesmeer of 'n nie-plak spuit en sluit die omhulsel van die toebroodjemaker om op te warm.



Afrikaans

Geagte Kliënt,

Dankie vir u keuse om 'n Mellerware handelsmerk produk te koop. Danksy die tegnologie, ontwerp en werking en die feit dat dit voldoen aan die strengste gehalte standaarde, is U verseker van 'n volle bevredigende gebruik en lang produklewe.

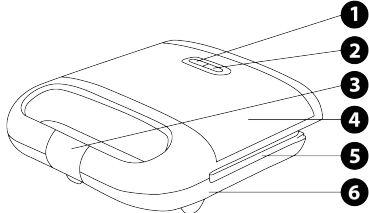

Onderdele beskrywing

1. Kraglig
2. Gereedlig
3. Handvasklip
4. Bokantse huis
5. Kookplaat
6. Onderkantse huis

1. Veiligheids advies en waarskuwing!

1. Wanneer elektriese toestelle gebruik word, moet basiese veiligheids maatreëls altyd gevolg word, insluitend die volgende:
- 1.1 Lees alle instruksies voor gebruik
 - 1.2. Moenie aan warm oppervlaktes raak nie. Gebruik handvatsels of knoppe.
 - 1.3. Om teen elektriese skok te beskerm, moenie koord, proppe of toestel in water of ander vloeistof dompel nie.
 - 1.4. Ontkoppel van krag toevoer wanneer dit nie gebruik word nie en voor skoonmaak. Laat afkoel voor jy dele aan- of afhaal.
 - 1.5. Moenie enige toestel met 'n beskadigde koord of prop gebruik nadat die toestel wanfunksioneer het of op enige manier beskadig is nie. Geen gebruiker-diensbare onderdele binne nie. Stuur toestel terug na die naaste gemagtigde diensfasiliteit of skakel ons tolvrye kliënte diensnommer vir inligting oor onderzoek, herstel of aanpassing.
 - 1.6. Die gebruik van bykomstighede wat nie deur die toestelvervaardiger aanbeveel word nie, kan

mellerware

makes life easier

PLANET

SANDWICH MAKER



National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

Durban creative housewares 20 Tokelst Street, Parow, Cape Town, 7493, RSA P O Box 6156, Parow East, 7501, RSA ☎ +27 21 931 8117 📠 +27 63 014 0457 📞 +27 86 111 5006 🏠 chousewares 🌐 www.creativehousewares.co.za	Johannesburg 25 & 26 San Croy Office Park ☎ Agora Road, Croydon, 1619, RSA +27 11 392 5652 🌐
---	--

