



REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition. If the repair cannot be conducted for whatever reason, Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended "communication opt in" warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 year's warranty.

ADDED BENEFITS

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Discount voucher on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments – be the first to get the latest appliances
- Special offers on promotional items

How to Register your Online Warranty?



DESKTOP/
LAPTOP

- Open your internet browser and visit www.mellerware.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.



SMART PHONE/
TABLET

- Open your internet browser and visit www.creativehousewares.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.

Notes:

1. The online warranty system is a safe storage facility for your receipt.
2. You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
4. All instructions on how to load your products are available inside your profile.
5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
6. For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

Durban

243 Percy Osborn Road
Morningside, Durban, 4001, RSA
+27 31 303 3465

creative housewares

20 Tekststree, Parow, Cape Town, 7493, RSA
P.O. Box 6156, Parow East, 7501, RSA
+27 21 931 8117 | +27 63 014 0457
+27 86 111 5006 | chousewares
www.creativehousewares.co.za

Johannesburg

25 & 26 San Croy Office Park
Agora Road, Croydon, 1619, RSA
+27 11 392 5652

complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

300W

 
Model:
26300C



English

Dear Customer

Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

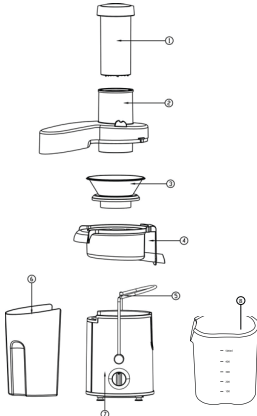

1. Parts description:

1. Pushing bar
2. Transparent cover
3. Mesh filter with steel blades
4. Filter holder
5. Handle
6. Removable pulp container
7. Juicer motor housing
8. Juice receptacle

2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

2.1. Use or working environment:

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well ventilated area.
- 2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
- 2.1.4. Keep children and bystanders away when using this appliance.
- 2.1.5. Place the appliance on a horizontal, flat, stable surface suitable for withstanding high temperatures and away

from other heat sources and contact with water.

- 2.1.6. Keep the appliance away from flammable material such as textiles, curtains, cardboard or paper, etc.
- 2.1.7. Do not place flammable material near the appliance.
- 2.1.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
- 2.1.9. Do not use the appliance if the cable or plug is damaged.
- 2.1.10. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.
- 2.1.11. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 10 amperes.
- 2.1.12. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.
- 2.1.13. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.
- 2.1.14. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.
- 2.1.15. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.
- 2.1.16. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
- 2.1.17. Do not wrap the power cord around the appliance.
- 2.1.18. Do not clip or crease the power cord.
- 2.1.19. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.
- 2.1.20. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
- 2.1.21. The appliance is not suitable for outdoor use.
- 2.1.22. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- 2.1.23. Do not touch the plug with wet hands.

2.2. Personal safety:

- 2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.
- 2.2.2. Do not touch the heated parts of the appliance, as it may cause serious burns.
- 2.2.3. This appliance is only for domestic use, not for industrial or professional use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels, and other types of residential environments, even in farm houses, areas of the kitchen staff in shops, offices and other work environments.
- 2.2.4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible

for their safety.

- 2.2.5. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

2.3. Use and care:

- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not use the appliance when empty.
- 2.3.4. Do not turn the appliance over while it is in use or connected to the mains power supply.
- 2.3.5. Do not cover the cooking surface or food with aluminium foil and other similar materials.
- 2.3.6. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.
- 2.3.7. This appliance should be stored out of reach of children.
- 2.3.8. Do not store the appliance if it is still hot.
- 2.3.9. Never leave the appliance unattended when in use and keep out of the reach of children.
- 2.3.10. If, for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT.

2.4. Service:

- 2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.
- 2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
- 2.4.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

3. Instructions for use:

3.1. Before use:

- 3.1.1. Remove the appliance's protective film (if applicable).
- 3.1.2. Before using the product for the first time, clean the parts that will come into contact with food in the manner described in the cleaning section.

3.2. Use and care:

- 3.2.1. Untill the power cord completely before plugging it in.
- 3.2.2. Connect the appliance to the wall socket.
- 3.2.3. Place the juice receptacle at the juice delivery tube.
- 3.2.4. Start the appliance; turn the speed selection dial to the desired speed.
- 3.2.5. Add the fruit or vegetables through the loading tube.
- 3.2.6. Gently push the food pusher accessory.

- 2.1.17. Moenie die kragkabel om die toestel draai nie.
- 2.1.18. Moenie die kragkabel knip of kreukel nie.
- 2.1.19. Moenie toelaat dat die kragkabel hang of met die warm oppervlaktes van die toestel in aanraking kom nie.
- 2.1.20. Kontroleer die toestand van die kragkabel. Beskadigde of verstrengelde kables verhoog die risiko van elektriese skok.
- 2.1.21. Die toestel is nie geskik vir buite gebruik nie.
- 2.1.22. Kragkoord moet gereeld ondersoek word vir tekens van skade, en as die koord beskadig is, moet die toestel nie gebruik word nie.
- 2.1.23. Moenie met net hande aan die prop raak nie.
- 2.2. Persoonlike veiligheid:
 - 2.2.1. LET WEL: Moenie die toestel sonder toesig laat nie
 - 2.2.2. Moenie warm oppervlaktes aanraak nie gebruik handvatsels of knoppe want dit kan lei tot ernstige brandwonde.
 - 2.2.3. Die toestel is nie geskik vir industriële gebruik soos kantore, hotelle motelle en gastehuise.
 - 2.2.4. Die toestel is nie geskik vir gebruik deur verminderde fisiese verstandelike vermoens of gebrek aan ervaring of kennis tensy hulle opleiding gehad het.
 - 2.2.5. Die toestel is nie 'n speelgoed en kinders moet altyd toesig he om te verhoed dat hulle met die toestel speel.

2.3. Gebruik en sorg:

- 2.3.1. Rol die toestel se kragkabel heeltemal uit voor elke gebruik.
- 2.3.2. Moenie die toestel gebruik as die onderdele of bykomstighede nie behoorlik aangebring is nie.
- 2.3.3. Moenie die toestel gebruik wanneer dit leeg is nie.
- 2.3.4. Moenie die toestel omdraai terwyl dit in gebruik is nie of aan die hoofkragtoevoer gekoppel.
- 2.3.5. Moenie die kookoppervlak of kos daarmee bedek nie aluminiumfoelie en ander soortgelyke materiale.
- 2.3.6. Ontkoppel die toestel van die kragtoevoer wanneer nie in gebruik en voor enige skoonmaaktaak onderneem word.
- 2.3.7. Hierdie toestel moet buite bereik gestoor word van kinders.
- 2.3.8. Moenie die toestel stoor as dit nog warm is nie.
- 2.3.9. Moet nooit die toestel sonder toesig laat wanneer dit binne is nie gebruik en hou buite bereik van kinders.
- 2.3.10. Indien die toestel om een of ander rede aan die brand sou raak, ontkoppel die toestel van die hoofkragtoevoer en MOENIE WATER GEBRUIK OM DIE VUUR TE BLUS NIE.

2.4. Diens:

- 2.4.1. Die toestel moet deur 'n gekwalifiseerde tegnikus gedien word
- 2.4.2. As die koord beskadig word moet dit deur die diensagent of 'n gekwalifiseerde persoon vervang word om brandgevaar te verhoed

- 3.2.7. The juice residue will be separated automatically: the juice will go towards the juice receptacle and the residue will go to the pulp container.

ATTENTION: If the locking handle is not properly fitted the appliance will not start.

N.B. If you process a large quantity of fruit, you must periodically clean the filter and remove the remains of the pulp.

3.2.2. Operation time

After operating for 30 seconds, stop for 1 minute, then use again. After the above operation is performed three times, stop use for 15 minutes. This way the service life of the appliance will be prolonged.

3.3. Once you have finished using the appliance:

- 3.3.1. Leave the motor on for a few seconds allowing the juice to be completely squeezed out.
- 3.3.2. Stop the appliance, selecting the "0" on the speed selection dial.
- 3.3.3. Unplug the appliance from the wall socket.
- 3.3.4. Clean the appliance as described in the cleaning section.

4. Cleaning and maintenance:

Disconnect the appliance from the mains power supply and allow it to cool completely before undertaking any cleaning task.

4.2. Disassemble the appliance in accordance with the following steps:

- 4.2.1. Before opening the liquidiser, ensure the motor has been completely switched off.
- 4.2.2. Lower the locking handle.
- 4.2.3. Remove the food pusher and the protective cover.
- 4.2.4. Remove the filter and the filter body by pulling on the filter body.
- 4.2.5. Remove the pulp container.
- 4.2.6. Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry. CAUTION! Do not immerse electrical parts of the appliance in any liquid.
- 4.2.7. Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- 4.2.8. Never submerge the appliance in water or any other liquid or place it under running water.
- 4.2.9. The following pieces may be washed in a dishwasher, but should only be placed in the top rack and should not be squeezed into small spaces that may cause the plastic to distort in shape:

- Food pusher

- 2.4.3. Enige misbruik en mislukking om instruksies te volg lewer die waarborg nul en leemte.

3. Instruksies vir gebruik:

3.1. Voor gebruik:

- 3.1.1. Verwyder alle verpakking materiaal voor gebruik
- 3.1.2. Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel

3.2.1. Gebruik:

- 3.2.1. Die kabel moet ten volle afgewikkel word voor gebruik
- 3.2.2. Koppel prop aan muursok
- 3.2.3. Plaas die sap houer by uitlaat
- 3.2.4. Sit toestel aan en draai na gewenste spoed
- 3.2.5. Voeg vrugte of groente in die buis
- 3.2.6. Gebruik drukker om af te druk
- 3.2.7. Die oorblyfsels sal outomaties in pulp houer val

AANDAG: As die handvatsel nie in die sluit posisie is nie, sal die toestel nie werk nie.

N.B. As groot hoeveelhede vrugte of groente verwerk word moet die filter gereeld skoonmaak word

3.2.2 Gebruik tyd

Na gebruik vir 30 sekondes, stop vir 1 minuut, en begin weer. Die gebruik kan drie keer gedoen word dan moet gebruik vir 15 minute gestop word.

3.3. Na gebruik:

- 3.3.1. Laat die motor hardloop vir 'n paar sekondes om alle oortollige sap uit te laat.
- 3.3.2. Stop die toestel en draai na '0, op die spoed beheer.
- 3.3.3. ontkoppel van muurprop.
- 3.3.4. Maak skoon soos in die skoonmaak seksie.

4. Skoonmaak:

Ontkoppel die toestel van die kragtoevoer en laat dit heeltemal afkoel voordat jy enige skoonmaaktaak aanpak.

4.2. Demonteer die toestel volgens die volgende stappe:

- 4.2.1. Voor die toestel oopgemaak word maak seker dis afgeskakel.
- 4.2.2. Maak die handvatsel oop.
- 4.2.3. Verwyder die drukker en die beskermdeksel
- 4.2.4. Verwyder die filter en die filter houer
- 4.2.5. Hak die pulp houer af.
- 4.2.6. Maak die toestel skoon met 'n klam doek met 'n paar druppels opwasmiddel op.
- WAARSKUWING: Die toestel mag nie in water gedruk word nie
- 4.2.7. Geen oplosmiddels soos bleikmiddels, skuur

- Protective cover
- Removable filter
- Filter holder
- Pulp container

5. Anomalies and repair:

- 5.1. Take the appliance to an authorised support centre if product is damaged or other problems arise.
- 5.2. If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

 
6. Recycling:

- 6.1. These electrical products, cables, batteries, packaging, and the manual, should not be mixed with general household waste. For proper recycling, please take these products to your nearest Creative Housewares office where they will be accepted for recycling free of charge.
- 6.2. Alternatively, please contact your local authority or household waste disposal service for further details of your nearest designated collection point. Correct product disposal saves resources and prevents negative effects on human health and the environment.



Afrikaans

Geagte klient,
Dankie vir u keuse om 'n Mellerware handelsmerk produk te koop. Danksy die tegnologie, ontwerp en werking en die feit dat dit voldoen aan die strengste gehalte standaarde, is u verseker van 'n volle bevredigende gebruik en lang produklewe.

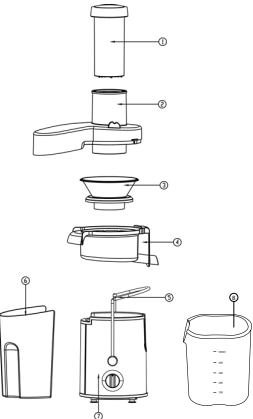

produkte mag gebruik word nie.

- 4.2.8. Die toestel mag nie onder lopende water gehou word nie.
- 4.2.9. Die volgende dele mag in die skottelgoedwasser gewas word:
 - Drukker
 - filter
 - Filter houer
 - Pulp houer

5. Berging:

- 5.1. Neem die toestel na gemagtigde tegniese sentrum as toestel beskadig is of probleme ontstaan.
- 5.2 As koneksie na die muurprop beskadig is moet die toestel vervang word volgens waarborg

6. Herwinning:

- 6.1. Hierdie elektriese produkte, kables, batterye, verpakking en die handleiding moet nie met algemene huishoudelike afval gemeng word nie. Vir behoorlike herwinning, neem hierdie produkte na u naaste kantoor vir Creative Housewares, waar dit gratis aanvaar word vir herwinning.
- 6.2. Kontak u plaaslike owerheid of huishoudelike vuilsdiens vir nadere besonderhede oor u naaste aangewese versamelpunt. Korrekte produkverwydering bespaar hulpbronne en voorkom negatiewe gevolge vir menslike gesondheid en die omgewing.

1. Onderdele beskrywing:

1. Drukker
2. Deursigtige deksel
3. Filter met staal lemme
4. Filter houer
5. Handvatsel
6. Verwyderbare pulp houer
7. Motor om huiwel
8. Sap houer

2. Belangrike veiligheidsvoorsorg:

 
Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel. Lees die instruksies deeglik en bewaar.

2.1. Gebruik en werksomgewing:

- 2.1.1 Hou die werk oppervlak skoon en helder verlig. Ongelukke gebeur in donker areas
- 2.1.2. Gebruik die produk in 'n goed geventileerde area
- 2.1.3 Moenie die toestel naby 'n warm gas of elektriese brander of 'n warm oond plaas nie.
- 2.1.4 Streng toesig is nodig as die toestel naby of deur kinders gebruik word
- 2.1.5. Plaas toestel op 'n stabiele area en weg van water
- 2.1.6 'n Brand mag ontstaan as die rooster bedek is of aan vlambare materiaal raak, insluitende gordyne as dit in werking is
- 2.1.7. Moenie vlambare materiaal naby die toestel plaas nie.
- 2.1.8. Moenie die toestel saam met 'n programmeerder, tydhouer of ander toestel gebruik wat dit outomaties aanskakel nie.
- 2.1.9. Moenie die toestel gebruik as die kabel of prop beskadig is nie.
- 2.1.10. Maak seker dat die spanning wat op die aanslagetiket aangedui word, ooreenstem met die kragtoevoerspanning voor die inprop
- 2.1.11. Koppel die toestel aan die hoofkragtoevoer met 'n aardsok wat 'n minimum van 10 weerstaan ampere.
- 2.1.12. Die toestel se prop moet behoorlik in die kragtoevoersok pas. Moenie die prop verander nie.
- 2.1.13. As 'n multiprop gebruik word, gaan die graderings noukeurig na, aangesien die stroom wat deur verskeie toestelle gebruik word maklik die gradering van die multiprop kan oorskry.
- 2.1.14. Indien enige van die toestelomhuelsels breek, ontkoppel die toestel onmiddellik van die hoofkragtoevoer om die moontlikheid van 'n elektriese skok te voorkom.
- 2.1.15. Moenie die toestel gebruik as dit op die vloer geval het of as daar sigbare tekens van skade is nie.
- 2.1.16. Moenie die kragkoord forseer nie. Moet nooit die kragkoord gebruik om die toestel op te lig, te dra of uit te skakel nie.

Spanish

Estimado cliente,
Gracias por elegir comprar un producto de la marca Mellerware. Gracias a su tecnología, diseño y funcionamiento, y al hecho de que supera los más estrictos estándares de calidad, puede garantizarse un uso totalmente satisfactorio y una larga vida del producto.

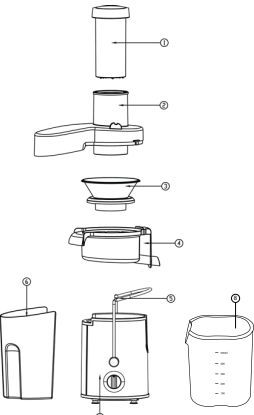

1. Descripción de las piezas:

1. Barra de empuje
2. Tapa transparente
3. Filtro de mala con cuchillas de acero
4. Portafiltro
5. Mango
6. Contenedor de pulpa extraíble
7. Carcasa del motor del exprimidor
8. Recipiente para el jugo

2. Advertencias y consejos de seguridad.

Lea atentamente estas instrucciones antes de encender el aparato y consérvelas para futuras consultas. El incumplimiento de estas instrucciones podría provocar un accidente. Limpie todas las partes del producto que estarán en contacto con los alimentos, como se indica en la sección de limpieza, antes de usarlo.

2.1. Uso o entorno de trabajo:

- 2.1.1. Mantenga el área de trabajo limpia y bien iluminada. Las áreas desordenadas y oscuras son propicias a los accidentes.
- 2.1.2. Utilice el aparato en un lugar bien ventilado.
- 2.1.3. No coloque el aparato sobre superficies calientes, como placas de cocina, quemadores de gas, hornos o similares.
- 2.1.4. Mantenga a los niños y a otras personas alejadas

