

mellerware

makes life easier

3

years

3

years

1 YEAR COMMUNICATION OPTION

1 YEAR ONLINE WARRANTY

REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended "communication opt in" warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 years' warranty.

ADDED BENEFITS

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Discount voucher on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments – be the first to get the latest appliances
- Special offers on promotional items

How to Register your Online Warranty?

DESKTOP/ LAPTOP

SMART PHONE/ TABLET

• Open your internet browser and visit www.mellerware.co.za

• Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.

• Click on "Register your Warranty" and follow the easy instructions.

• Scan and upload your receipt.

• Open your internet browser and visit www.creativehousewares.co.za

• Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.

• Click on "Register your Warranty" and follow the easy instructions.

• Scan and upload your receipt.

Notes:

- The online warranty system is a safe storage facility for your receipt.
- You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
- From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
- All instructions on how to load your products are available inside your profile.
- Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
- For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

creative housewares

20 Tekstil Street, Parow, Cape Town, 7493, RSA

PO Box 6156, Parow East, 7501, RSA

+27 21 931 8117 | +27 79 890 6867

+27 86 111 5006 | chousewares.co.za

Johannesburg

25 & 26 San Croy Office Park

Agora Road, Croydon, 1619, RSA

+27 11 392 5652

complies with INTERNATIONAL IEC60335 SAFETY SPECIFICATIONS

m

700W

Model:

26800T

English
Dear Customer
Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

1. Parts description
A. Door Safety Lock System
B. Microwave Window
C. Shaft
D. Roller Ring
E. Door Release Button
F. Timer Dial
G. Power Dial
H. Waveguide
Note: Do not remove the mica plate covering the waveguide.
1. Glass Turntable

2. Safety advice and warnings!
Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

2.1. Use or working environment
2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
2.1.2. Use the appliance in a well ventilated area.
2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
2.1.4. Keep children and bystanders away when using this appliance.
2.1.5. Place the appliance on a horizontal, flat, stable surface suitable for withstanding high temperatures and away from other heat sources and contact with water.
2.1.6. Keep the appliance away from flammable material such as textiles, curtains, cardboard or paper, etc.
2.1.7. Do not place flammable material near the appliance.
2.1.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
2.1.9. Do not use the appliance if the cable or plug is damaged.
2.1.10. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.
2.1.11. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 10 amperes.

2.1.12. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.
2.1.13. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.
2.1.14. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.
2.1.15. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.
2.1.16. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
2.1.17. Do not wrap the power cord around the appliance.
2.1.18. Do not clip or crease the power cord.
2.1.19. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.
2.1.20. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
2.1.21. The appliance is not suitable for outdoor use.
2.1.22. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
2.1.23. Do not touch the plug with wet hands power supply to prevent the possibility of an electric shock.

2.2. Personal safety:
2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.
2.2.2. Do not touch the heated parts of the appliance, as it may cause serious burns.
2.2.3. This appliance is only for domestic use, not for industrial or professional use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels, and other types of residential environments, even in farm houses, areas of the kitchen staff in shops, offices and other work environments.
2.2.4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2.2.5. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

2.3. Use and care:
2.3.1. Fully unroll the appliance's power cable before each use.
2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
2.3.3. Do not use the appliance when empty.
2.3.4. Do not turn the appliance over while it is in use or connected to the mains power supply.
2.3.5. Do not cover the cooking surface or food with aluminium foil and other similar materials.
2.3.6. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.
2.3.7. This appliance should be stored out of reach of children.
2.3.8. Do not store the appliance if it is still hot.
2.3.9. Never leave the appliance unattended when in use and keep out of the reach of children.
2.3.10. If, for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT

2.4. Utensils guide
2.4.1. Microwaves do not penetrate metal. Only use utensils that are specifically designed and approved for microwave oven use. Metal containers for food or beverages must not be used unless the manufacturer clearly states that their size and shape are suitable for microwave cooking.
2.4.2. Do not use metal utensils or cookware with metallic trim, as these materials can cause sparking and may damage the microwave.
2.4.3. Do not use recycled paper products in the microwave, as they may contain small metal particles that can cause sparks and/or fire.
2.4.4. Round or oval dishes are recommended over square or rectangular dishes, as food in the corners of square containers tends to overcook.
The list below provides a general guide to help you select suitable utensils for microwave use.

COOKWARE	MICROWAVE
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminium Foil & Foil Containers	No

2.5. Service:
2.5.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.
2.5.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
2.5.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

3. Instructions for use:

3.1. Before use:
3.1.1. Before connecting the appliance to the power outlet, make sure the timer is set to "0" position.
3.1.2. Before using the product for the first time, clean the parts that will come into contact with food in the manner described in the cleaning section.
3.1.3. Unroll the power cord completely before plugging it in.
3.1.4. Assemble the glass turntable by first placing the Roller ring inside the microwave. Thereafter place the Glass tray on the rotation ring ensuring that it lines up with the rotation axis.
3.1.5. Insert the plug into the power socket.

3.2. Control panel:

The control panel consists of two function operators. One is a timer dial, and another a power dial.

3.2.1. Power / Action Dial
Use this dial to select the desired microwave power level. This is the first step when starting a cooking session.

3.2.2. Timer Dial

Use this dial to set the cooking time. Simply turn the dial to select the desired cooking duration, up to a maximum of 30 minutes per cooking session.

3.2.3. Microwave Cooking
For microwave-only cooking, six power levels are available to suit different cooking requirements. Turn the power/action dial clockwise to increase the power level. The power levels are classified as follows:

	Power Output	Description
1	100%	HIGH
2	88%	M.HIGH
3	73%	MEDIUM
4	52%	M.LOW
5	42%	DEFROST
6	20%	LOW

3.3. Use and care:

3.3.1. Place the appliance on a flat, dry, stable, and heat-resistant surface.
3.3.2. Open the microwave oven door.
3.3.3. Place the food container on the glass turntable and close the door securely.
3.3.4. Select the desired power level by turning the power level dial.
3.3.5. Set the cooking time by turning the timer dial. Cooking will begin automatically once the timer is set.
3.3.6. To pause cooking during operation, open the door at any time. Close the door to resume cooking.
3.3.7. When cooking is complete, a bell will sound and the interior light will switch off automatically.
3.3.8. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

and/or soortgelyke materiale bedek nie.

2.3.6. Ontkoppel die toestel van die hoofkragtoevoer wanneer dit nie gebruik word nie en voordat enige skoonmaaktaak onderneem word.
2.3.7. Hierdie toestel moet buite bereik van kinders gebêre word.
2.3.8. Moenie die toestel bêre as dit nog warm is nie.
2.3.9. Moet nooit die toestel sonder toetsig laat wanneer dit in gebruik is nie en hou dit buite bereik van kinders.
2.3.10. Indien die toestel om een of ander rede aan die brand slaan, ontkoppel die toestel van die hoofkragtoevoer en MOENIE WATER GEBRUIK OM DIE VUUR TE BLUS NIE.

2.4. Gids vir gereedskap

2.4.1. Mikrogoeltoonde dring nie deur metaal nie. Gebruik slegs gereedskap wat spesifiek ontwerp en goedgekeur is vir gebruik in 'n mikrogoeltoond. Metaalhouers vir kos of drankies moet nie gebruik word tensy die vervaardiger duidelik aandui dat hul grootte en vorm geskik is vir mikrogoelkook nie.
2.4.2. Moenie metaalgereedskap of kookgerei met metaalversiering gebruik nie, aangesien hierdie materiale vonke kan veroorsaak en die mikrogoeltoond kan beskadig.
2.4.3. Moenie herwinde papierprodukte in die mikrogoeltoond gebruik nie, aangesien dit klein metaaldeeltjies kan bevat wat vonke en/of vuur kan veroorsaak.
2.4.4. Ronde of ovaal geregte word aanbeveel bo vierkantige of reghoekige geregte, aangesien kos in die hoeke van vierkantige houers geneig is om oor te kook.
Die lys hieronder bied 'n algemene riglyn om jou te help om geskikte gereedskap vir mikrogoelgebruik te kies.

KOOKWARE	MIKROGOLF
Hittebestande Glas	Ja
Nie-hittebestande Glas	Nee
Hittebestande Keramiek	Ja
Mikrogoel-veilige Plastiekbak	Ja
Kombuispapier	Ja
Metaalbak	Nee
Metaalrak	Nee
Aluminiumfoelie en Foeliehouers	Nee

2.5. Diens:

2.5.1. Maak seker dat die toestel slegs deur 'n geskikte gekwalifiseerde tegnikus gedien word, en dat slegs oorspronklike onderdele of bykomstighede gebruik word om bestaande onderdele/bykomstighede te vervang.
2.5.2. Indien die kragkabel beskadig is, moet die vervaardiger of sy diensagent of 'n soortgelyk gekwalifiseerde persoon dit vervang om 'n gevaar te vermy.
2.5.3. Enige misbruik of versuim om die gebruiksaanwysings te volg, maak die waarborg en die vervaardiger se aanspreeklikheid niegig.

3. Gebruiksaanwysings:

3.1. Voor gebruik:

3.1.1. Voordat u die toestel aan die krag aansluiting koppel, maak seker dat die timer op die "0"-posisie gestel is.
3.1.2. Voordat u die produk vir die eerste keer gebruik, maak die die skoon wat met voedsel in aanraking sal kom op die manier wat in die skoonmaakafdeling beskryf word.
3.1.3. Rol die kragkabel heeltemal af voordat u dit inprop.
3.1.4. Monteer die glasdraaitafel deur eers die roling binne-in die mikrogoeltoond te plaas. Plaas daarna die glasbak op die rotasiering en maak seker dat dit in lyn is met die rotasie-as.

3.4. Use: General notes

To start a cooking session:
3.4.1. Place the food in the microwave oven and close the door securely.
3.4.2. Turn the power level dial to select the desired power level.
3.4.3. Turn the timer dial to set the required cooking time.
NOTE:
Cooking begins immediately once the timer dial is turned. When setting a cooking time of less than 2 minutes, turn the timer dial past the 2-minute mark first, then turn it back to the desired time.
CAUTION:
Always return the timer dial to the "0" position if food is removed before the set cooking time has elapsed or when the microwave oven is not in use.
To stop the microwave oven during operation, press the door release button or open the door using the handle.

4. Cleaning

4.1. Before cleaning, disconnect the appliance from the mains power supply and allow it to cool completely.
4.2. Clean the microwave regularly and remove any food deposits to maintain safe and efficient operation.
4.3. Do not immerse the appliance in water or any other liquids.
4.4. Failure to keep the microwave clean may cause deterioration of surfaces, reduce the appliance's lifespan, and create a potential safety hazard.
4.5. Never use abrasive detergents, powders, or a metal brush to clean any part of the appliance.
4.6. Do not remove the waveguide cover.
4.7. If the microwave develops odours after extended use, try one of the following methods to remove them:
a. Place several lemon slices in a cup and heat on high microwave power for 2–3 minutes.
b. Place a cup of tea in the microwave and heat on high microwave power for 2–3 minutes.
c. Place some orange peel in the microwave and heat on high microwave power for 1 minute.
4.8. Wipe the exterior of the microwave with a damp cloth.
4.9. Use a damp, soft cloth to clean the door and window.
4.10. Wipe the door seals and surrounding areas to remove any spills or splashes.
4.11. Wipe the control panel with a slightly damp soft cloth.
4.12. Wipe the interior walls with a damp soft cloth.
4.13. Clean the waveguide cover carefully to remove any food splashes.
4.14. Clean the turntable with warm, soapy water, rinse thoroughly with clean water, and allow it to dry completely before use.

5. Anomalies and repair

5.1. Take the appliance to an authorised support centre if product is damaged or other problems arise.
5.2. If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.
PLEASE NOTE ALL COOKING TIMES ARE A GUIDELINE ONLY. COOKING TIMES MAY VARY DEPENDING ON THE SIZE OF THE FOOD.

6. Recycling

6.1. These electrical products, cables, batteries, packaging, and the manual, should not be mixed with general household waste. For proper recycling, please take these products to your nearest Creative Housewares office where they will be accepted for

3.1.5. Steek die prop in die krag sok.

3.2. Beheerpaneel:

Die beheerpaneel bestaan uit twee funksie-operateurs. Een is 'n tyd skakelaar en 'n ander 'n aan/af-skakelaar.

3.2.1. Krag-/Aksie-skakelaar
Gebruik hierdie skakelaar om die verlangde mikrogoelkragvlak te kies. Dit is die eerste stap wanneer 'n kooksessie begin word.

3.2.2. Timer-skakelaar

Gebruik hierdie skakelaar om die kooktyd in te stel. Draai eenvoudig die skakelaar om die verlangde kookduur te kies, tot 'n maksimum van 30 minute per kooksessie.

3.2.3. Mikrogoelkook

Vir slegs mikrogoelkook is ses kragvlakke beskikbaar om aan verskillende kookverreistes te voldoen. Draai die krag-/aksie-skakelaar kloksgewys om die kragvlak te verhoog.

Die kragvlakke word soos volg geklassifiseer:

Kraguitset	Beskrywing
1	100% HOOG
2	88% M.HOOG
3	73% MEDIUM
4	52% M.LAAG
5	42% ONTDOOI
6	20% LAAG

3.3. Gebruik en versorging:

3.3.1. Plaas die toestel op 'n plat, droë, stabiele en hittebestande oppervlak.
3.3.2. Maak die mikrogoeltoond oor.
3.3.3. Plaas die voedselhouer op die glasdraaitafel en maak die deur stewig toe.
3.3.4. Kies die verlangde kragvlak deur die kragvlakskakelaar te draai.
3.3.5. Stel die kooktyd in deur die timerskakelaar te draai. Kook sal outomaties begin sodra die timer ingestel is.
3.3.6. Om kook tydens werking te onderbreek, maak die deur enige tyd oop. Maak die deur toe om kook te hervat.
3.3.7. Wanneer kook voltooi is, sal 'n kloklike lui en die binne sal outomaties afstel.
3.3.8. As kos verwyder word voordat die ingestelde tyd verstryk het, maak seker dat die timer na die "0"-posisie teruggeset word. Dit verhoed dat die mikrogoeltoond sonder 'n ladings werk.

recycling free of charge.
6.2. Alternatiewe, please contact your local authority or household waste disposal service for further details of your nearest designated collection point. Correct product disposal saves resources and prevents negative effects on human health and the environment.

Afrikaans
Geagte Kliënt

Dankie dat jy gekies het om 'n Mellerware-handelsmerkprodukt te koop. Danksy sy tegnologie, ontwerp en werking en die feit dat dit die strengste kwaliteitstandaarde oorskry, kan 'n ten volle bevredigende gebruik en lang produklewre verseker word.ong product life can be assured.

1. Onderdele beskrywing
A. Deurveiligheidsstootstelsel
B. Mikrogoelvenster
C. As
D. Rolring
E. Deurverstellingsknop
F. Tydskaakelaar
G. Kragvakskaakelaar
H. Goltgeleier
Let wel: Moenie die mikaplaat wat die goltgeleier bedek, verwyder nie.
I. Glasdraaitafel

2. Veiligheidsadvies en waarskuwings!

Lees hierdie instruksies noukeurig deur voordat u die toestel aanskakel en hou dit vir toekomstige verwysing. Versuim om hierdie instruksies te volg en na te kom, kan tot 'n ongeluk lei. Maak al die dele van die produk seker wat met voedsel in aanraking sal wees, soos aangedui in die skoonmaakafdeling, voor gebruik.

2.1. Gebruik van werksomgewing

2.1.1. Hou die werkbare skoon en goed belig. Oorvol en donker areas nood ongelukke uit.
2.1.2. Gebruik die toestel in 'n goed geventileerde area.
2.1.3. Moenie die toestel op warm oppervlakke plaas nie, soos kookplaat, gasbranders, onde of soortgelyke items.
2.1.4. Hou kinders en ontsanderders weg wanneer u hierdie toestel gebruik.
2.1.5. Plaas die toestel op 'n horisontale, plat, stabiele oppervlak wat geskik is om hoë temperature te weerstaan en weg van ander hittebronne en kontak met water.
2.1.6. Hou die toestel weg van vlambare materiaal soos tekstiele,

3.4. Gebruik: Algemene notas

Om 'n kooksessie te begin:
3.4.1. Plaas die kos in die mikrogoeltoond en maak die deur stewig toe.
3.4.2. Draai die kragvlak-skakelaar om die verlangde kragvlak te kies.
3.4.3. Draai die timer-skakelaar om die verlangde kooktyd in te stel.
LET WEL:
Kook begin onmiddellik sodra die timer-skakelaar gedraai word. Wanneer 'n kooktyd van minder as 2 minute ingestel word, draai die timer-skakelaar eers verby die 2-minuut-merk en draai dit dan terug na die verlangde tyd.
WAARSKUWING:
Stuur die timer-skakelaar altyd terug na die "0"-posisie as kos verwyder word voordat die ingestelde kooktyd verstryk het of wanneer die mikrogoeltoond nie gebruik word nie. Om die mikrogoeltoond tydens werking te stop, druk die deurontgrendelingsknoppie of maak die deur oop met die handvat.

4. Skoonmaak

4.1. Ontkoppel die toestel van die hoofkragtoevoer en laat dit heeltemal afkoel voordat u dit skoonmaak.
4.2. Maak die mikrogoeltoond gereeld skoon en verwyder enige voedselafsettings om veilige en doeltreffende werking te handhaaf.
4.3. Moenie die toestel in water of enige ander vloeistowwe dompel nie.
4.4. Versuim om die mikrogoeltoond skoon te hou, kan veroorsaak dat oppervlakke agteruitgaan, die toestel se lewensduur verminder en 'n potensiele veiligheidsgevaar skep.
4.5. Moet nooit skuurmiddels, poeiers of 'n metaalborsel gebruik om enige deel van die toestel skoon te maak nie.
4.6. Moenie die goltgeleierbedekking verwyder nie.
4.7. As die mikrogoeltoond na langdurige gebruik reuk ontwikkel, probeer een van die volgende metodes om dit te verwyder:
a. Plaas 'n paar suurlemoenskyfies in 'n koppie en verhit dit vir 2-3 minute op hoë mikrogoelkrag.
b. Plaas 'n koppie tee in die mikrogoeltoond en verhit dit vir 2-3 minute op hoë mikrogoelkrag.
c. Plaas 'n bietjie lemoenskil in die mikrogoeltoond en verhit dit vir 1 minuut op hoë mikrogoelkrag.
4.8. Vee die buitekant van die mikrogoeltoond af met 'n klam lap.
4.9. Gebruik 'n klam, sagte lap om die deur en venster skoon te maak.
4.10. Vee die deurselle en omliggende areas af om enige gemors of spatsele te verwyder.
4.11. Vee die beheerpaneel af met 'n effens klam sagte lap.
4.12. Vee die binnevlak af met 'n klam sagte lap.
4.13. Maak die goltgeleierbedekking versigtig skoon om enige kosspatsele te verwyder.
4.14. Maak die draaitafel skoon met warm seepwater, spoel deeglik af met skoon water en laat dit heeltemal droog word voor gebruik.

 
 
5. Anomalies en herstelwerk

5.1. Neem die toestel na 'n gemagtigde ondersteuningsentrum indien die produk beskadig is of ander probleme ontstaan.
5.2. Indien die aansluiting aan die hoofstroom beskadig is, moet dit vervang word en moet u voortgaan soos u sou in die geval van skade.
LET WEL ALLE KOOKTYE IS SLEGS 'N RIGLYN. KOOKTYE KAN VERSKIL AFHANGENDE VAN DIE GROOTTE VAN DIE KOS.

6. Herwinning

6.1. Hierdie elektriese produkte, kables, batterrye, verpakking en die handlingmoed moet nie met algemene huishoudelike afval gemeng word nie. Vir behoorlike herwinning, neem asseblief hierdie produkte na u naaste Creative Housewares-kantoor waar hulle gratis vir herwinning aanvaar sal word.

6.2. Alternatiewelik, kontak asseblief u plaaslike owerheid of huishoudelike afvalverwyderingsdiens vir verdere besonderhede oor u naaste aangewese versamelpunt. Korrekte produkverwydering bespaar hulprone in voorkom negatiewe gevolge vir menslike gesondheid en die omgewing.

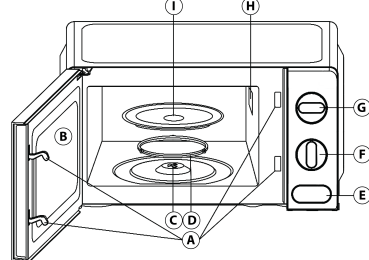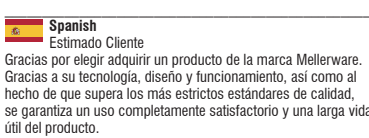

1. Descripción de las piezas

- Sistema de bloqueo de seguridad de la puerta
- Ventana del microondas
- Eje
- Anillo giratorio
- Botón de apertura de la puerta
- Selector del temporizador
- Selector de encendido
- Guía de ondas

Nota: No retire la placa de mica que cubre la guía de ondas.

- Plato giratorio de vidrio

2. Consejos y advertencias de seguridad

Lea atentamente estas instrucciones antes de encender el aparato y consérvelas para futuras consultas. El incumplimiento de estas instrucciones podría provocar un accidente. Limpie todas las piezas del producto que vayan a estar en contacto con alimentos, como se indica en la sección de limpieza, antes de usarlo.

2.1. Uso o entorno de trabajo

- 2.1.1. Mantenga el área de trabajo limpia y bien iluminada. Las áreas desordenadas y oscuras pueden provocar accidentes.
- 2.1.2. Utilice el aparato en un área bien ventilada.
- 2.1.3. No coloque el aparato sobre superficies calientes, como placas de cocina, quemadores de gas, hornos o similares.
- 2.1.4. Mantenga a los niños y a otras personas alejados cuando utilice este aparato.

Papier aluminium et barquettes en aluminium	Non
---	-----

2.5. Service après-vente:

2.5.1. Veillez à ce que l'appareil soit réparé uniquement par un technicien qualifié et que seules des pièces de rechange ou des accessoires d'origine soient utilisés pour remplacer les pièces ou accessoires existants.

2.5.2. Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après-vente ou une personne qualifiée afin d'éviter tout danger.

2.5.3. Toute mauvaise utilisation ou tout non-respect du mode d'emploi annule la garantie et dégage le fabricant de toute responsabilité.

 
3. Mode d'emploi:

3.1. Avant utilisation:

- 3.1.1. Avant de brancher l'appareil, assurez-vous que la minuterie est réglée sur « 0 ».
- 3.1.2. Avant la première utilisation, nettoyez les pièces en contact avec les aliments comme indiqué dans la section Nettoyage.
- 3.1.3. Déroulez complètement le cordon d'alimentation avant de le brancher.
- 3.1.4. Assemblez le plateau tournant en verre en plaçant d'abord l'anneau de roulement à l'intérieur du micro-ondes. Placez ensuite le plateau en verre sur l'anneau de rotation en veillant à ce qu'il soit aligné avec l'axe de rotation.
- 3.1.5. Branchez la prise dans la prise de courant.

3.2. Panneau de commande:

Le panneau de commande comporte deux boutons : un bouton de minuterie et un bouton marche/arrêt.

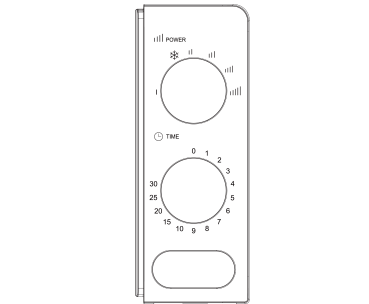

3.2.1. Sélecteur de puissance

Utilisez ce sélecteur pour choisir le niveau de puissance du micro-ondes. C'est la première étape pour démarrer une cuisson.

3.2.2. Minuteur

Utilisez ce sélecteur pour régler la durée de cuisson. Tournez-le simplement pour sélectionner la durée souhaitée, jusqu'à 30 minutes maximum par session.

3.2.3. Cuisson au micro-ondes

Pour la cuisson au micro-ondes uniquement, six niveaux de puissance sont disponibles pour répondre à différents besoins. Tournez le sélecteur de puissance dans le sens des aiguilles d'une montre pour augmenter la puissance.

- 2.1.5. Coloquez le appareil sobre una superficie horizontal, plana y estable, adecuada para soportar altas temperaturas, lejos de otras fuentes de calor y del contacto con el agua.
- 2.1.6. Mantenga el aparato alejado de materiales inflamables como textiles, cortinas, cartón o papel, etc.
- 2.1.7. No coloque materiales inflamables cerca del aparato.
- 2.1.8. No utilice el aparato junto con un programador, temporizador u otro dispositivo que lo encienda automáticamente.
- 2.1.9. No utilice el aparato si el cable o el enchufe están dañados.

2.1.10. Asegúrese de que la tensión indicada en la etiqueta de características coincida con la tensión de la red eléctrica antes de enchufar el aparato.

2.1.11. Conecte el aparato a la red eléctrica con una toma de tierra que soporte un mínimo de 10 amperios.

2.1.12. El enchufe del aparato debe encajar correctamente en la toma de corriente. No lo modifique.

2.1.13. Si utiliza un enchufe múltiple, compruebe cuidadosamente la potencia nominal, ya que la corriente utilizada por varios aparatos podría superar fácilmente la del enchufe múltiple.

2.1.14. Si alguna de las carcassas del aparato se rompe, desconéctelo inmediatamente de la red eléctrica para evitar una descarga eléctrica.

2.1.15. No utilice el aparato si se ha caído al suelo o si presenta daños visibles.

2.1.16. No fuerce el cable de alimentación. Nunca utilice el cable de alimentación para levantar, transportar o desenchufar el aparato.

2.1.17. No enrolle el cable de alimentación alrededor del aparato.

2.1.18. No corte ni doble el cable de alimentación.

2.1.19. No permita que el cable de alimentación cuelgue ni entre en contacto con las superficies calientes del aparato.

2.1.20. Compruebe el estado del cable de alimentación. Los cables dañados o enredados aumentan el riesgo de descarga eléctrica.

2.1.21. El aparato no es apto para uso en exteriores.

2.1.22. El cable de alimentación debe examinarse periódicamente para detectar posibles daños. Si está dañado, no utilice el aparato.

2.1.23. No toque el enchufe de la toma de corriente con las manos mojadas para evitar una posible descarga eléctrica.

2.2. Seguridad personal:

2.2.1. PRECAUCIÓN: No deje el aparato desatendido durante su uso, ya que existe riesgo de accidente.

2.2.2. No toque las partes calientes del aparato, ya que podría causar quemaduras graves.

2.2.3. Este aparato es solo para uso doméstico, no industrial ni profesional. No está diseñado para ser utilizado por huéspedes en establecimientos de hostelería como hostales, hoteles, moteles y otros tipos de entornos residenciales, ni siquiera en casas rurales, zonas de cocina en tiendas, oficinas y otros entornos laborales.

2.2.4. Este aparato no está diseñado para ser utilizado por personas (incluidos niños) con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimientos, a menos que sean supervisados o instruidos sobre su uso por una persona responsable de su seguridad.

2.2.5. Este aparato no es un juguete. Se debe supervisar a los niños para asegurarse de que no jueguen con el aparato.

2.3. Uso y cuidado:

2.3.1. Desenrolle completamente el cable de alimentación del

Puissance de sortie	Description
1 100%	ÉLEVÉE
2 88%	MOYENNE ÉLEVÉE
3 73%	MOYENNE
4 52%	MOYENNE FAIBLE
5 42%	DÉGIVRAGE
6 20%	FAIBLE

- 3.3. Utilisation et entretien:
- 3.3.1. Place the appliance on a flat, dry, stable, and heat-resistant surface.
- 3.3.2. Open the microwave oven door.
- 3.3.3. Place the food container on the glass turntable and close the door securely.
- 3.3.4. Select the desired power level by turning the power level dial.
- 3.3.5. Set the cooking time by turning the timer dial. Cooking will begin automatically once the timer is set.
- 3.3.6. To pause cooking during operation, open the door at any time. Close the door to resume cooking.
- 3.3.7. When cooking is complete, a bell will sound and the interior light will switch off automatically.
- 3.3.8. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.9. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.10. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.11. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.12. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.13. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.14. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.15. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.16. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.17. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.18. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.19. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.20. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.21. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.22. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.23. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.24. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.25. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.26. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.27. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.28. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.29. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.30. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.31. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.32. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.33. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.34. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.35. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.36. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.37. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.38. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.39. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.40. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

3.3.41. When cooking is complete, a bell will sound and the interior light will switch off automatically.

3.3.42. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

UTENSILIOS DE COCINA	MICROONDAS
Vidrio resistente al calor	Si
Vidrio no resistente al calor	No
Cerámica resistente al calor	Si
Plato de plástico apto para microondas	Si
Bandeja de papel para hornear	Si
Bandeja metálica	No
Rejilla metálica	No
Papel de aluminio y recipientes de aluminio	No

2.5. Servicio:

2.5.1. Asegúrese de que el aparato sea reparado únicamente por técnicos debidamente cualificados y de que solo se utilicen repuestos o accesorios originales para sustituir las piezas o accesorios existentes.

2.5.2. Si el cable de alimentación está dañado, el fabricante, su agente de servicio técnico o una persona con cualificación similar debe sustituirlo para evitar riesgos.

2.5.3. Cualquier mal uso o incumplimiento de las instrucciones de uso anula la garantía y la responsabilidad del fabricante.

3. Instrucciones de uso:

3.1. Antes de usar:

- 3.1.1. Antes de conectar el aparato a la toma de corriente, asegúrese de que el temporizador está en la posición "0".
- 3.1.2. Antes de utilizar el producto por primera vez, limpie las piezas que vayan a entrar en contacto con los alimentos como se describe en la sección de limpieza.

- b. Place a cup of tea in the microwave and heat on high microwave power for 2–3 minutes.
- c. Place some orange peel in the microwave and heat on high microwave power for 1 minute.
- 4.8. Wipe the exterior of the microwave with a damp cloth.
- 4.9. Use a damp, soft cloth to clean the door and window.
- 4.10. Wipe the door seals and surrounding areas to remove any spills or splashes.
- 4.11. Wipe the control panel with a slightly damp soft cloth.
- 4.12. Wipe the interior walls with a damp soft cloth.
- 4.13. Clean the waveguide cover carefully to remove any food splashes.
- 4.14. Clean the turntable with warm, soapy water, rinse thoroughly with clean water, and allow it to dry completely before use.

4.15. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.16. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.17. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.18. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.19. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.20. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.21. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.22. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.23. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.24. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.25. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.26. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.27. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.28. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.29. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.30. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.31. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.32. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.33. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.34. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.35. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.36. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.37. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.38. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.39. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.40. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.41. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.42. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.43. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.44. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.45. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.46. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.47. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.48. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.49. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.50. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.51. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.52. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.53. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.54. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.55. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.56. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.57. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.58. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.59. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.60. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.61. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.62. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.63. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.64. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.65. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.66. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.67. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.68. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.69. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.70. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.71. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.72. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.73. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.74. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.75. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.76. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.77. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.78. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.79. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.80. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.

4.81. When cooking is complete, a bell will sound and the interior light will switch off automatically.

4.82. If food is removed before the set time has elapsed, ensure the timer is returned to the "0" position. This prevents the microwave oven from operating without a load.