

REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim, and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and you will not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim, and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended “communication opt in” warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 year's warranty.

ADDED BENEFITS

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Discount vouchers on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments - be the first to get the latest appliances
- Special offers on promotional items

How to Register your Online Warranty?



DESKTOP/
LAPTOP

- Open your internet browser and visit www.mellerware.co.za
- Click on the “Register” link and create your username and password. Or if you have done this already login with your username and password.
- Click on “Register your Warranty” and follow the easy instructions.
- Scan and upload your receipt.



SMART PHONE/
TABLET

- Open your internet browser and visit www.creativehousewares.co.za
- Click on the “Register” link and create your username and password. Or if you have done this already login with your username and password.
- Click on “Register your Warranty” and follow the easy instructions.
- Scan and upload your receipt.

Notes:

1. The online warranty system is a safe storage facility for your receipt.
2. You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
4. All instructions on how to load your products are available inside your profile.
5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
6. For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

 
Durban
20 Tekstiel Street, Parow, Cape Town, 7493, RSA
PO Box 6156, Parow East, 7501, RSA
☎ +27 21 931 8117 | ☎ +27 63 014 0457
✉ +27 86 111 5006 | [chousewares](https://www.creativehousewares.co.za)
www.creativehousewares.co.za

Johannesburg
25 & 26 San Croy Office Park
Agora Road, Croynod, 1619, RSA
☎ +27 11 392 5562



English

Dear Customer
Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

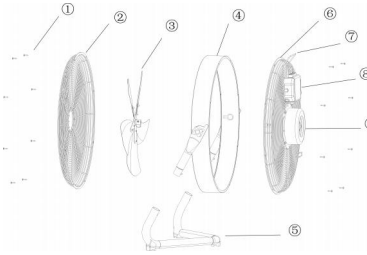

1. Parts description

- 1.1. Screws
- 1.2. Front Grille
- 1.3. Blades
- 1.4. Cylinder
- 1.5. Feet
- 1.6. Rear grille switch
- 1.7. Handle
- 1.8. Speeds selections
- 1.9. Motor

2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

2.1. Use or working environment:

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well-ventilated area.
- 2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
- 2.1.4. Keep children and bystanders away when using this appliance.
- 2.1.5. Place the appliance on a horizontal, flat, stable surface and away from other heat sources and contact with water.
- 2.1.6. Keep the appliance away from flammable material such as textiles, curtains,

hotels, motels, and other types of residential environments, even in farm houses, areas of the kitchen staff in shops, offices and other work environments.
2.2.4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2.2.5. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

2.3. Use and care:
2.3.1. Fully unroll the appliance's power cable before each use.
2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply.
2.3.4. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.
2.3.5. This appliance should be stored out of reach of children.
2.3.6. Do not store the appliance if it is still hot.
2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.
2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT.

2.4. Service:
2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.
2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
2.4.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

3. Instructions for use
3.1. Before use:
3.1.1. Remove the appliance's protective film (if applicable).
3.1.2. Before using the product for the first time, clean in the manner described in the



VELOCITY 16 FLOOR FAN



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
55W

Model:
35916



cleaning section.
3.2. Assembly:
3.2.1. Insert the V-shaped support tube into the straight tube of the fan base until it reaches the limit bump.
3.2.2. Press and hold the limit bump.
3.2.3. Continue to insert the V-shaped tube further into the straight tube until the limit bump snaps securely into the limit hole of the V-shaped tube.
3.2.4. Remove any protective film or packaging materials from the fan (if applicable).
3.2.5. For optimal performance and hygiene, clean the fan's exterior as described in the "Cleaning" section (Section 4) before using it for the very first time.

3.3. Use and care:
3.3.1. Turning the fan on:
3.3.1.1. Place the fan on a stable, level surface.
3.3.1.2. Connect the fan to a standard mains power outlet.
3.3.1.3. Select your desired airflow using the speed selection buttons on the control panel:
0. Stop fan (Power off)
1. Minimum air flow
2. Medium air flow
3. Maximum air flow
3.3.2. Once you have finished using the appliance:
3.3.2.1. Allow the fan blades to come to a complete stop by selecting "0" (Stop fan).
3.3.2.2. Unplug the fan from the mains power supply.
3.3.2.3. Clean the fan as described in the "Cleaning" section (Section 4).

4. Cleaning:
4.1. Always disconnect the fan from the mains power supply and ensure it has completely stopped before undertaking any cleaning task.
4.2. Clean the fan's outer parts (grilles and body) with a soft, damp cloth moistened with

 
3.1. Before use:
3.1.1. Remove the appliance's protective film (if applicable).
3.1.2. Before using the product for the first time, clean in the manner described in the

2.1.8. Die toestel is nie geskik om aan 'n tydsbeheer toestel te Koppel nie.
2.1.9. Moenie die toestel gebruik as die koord of prop beskadig is.
2.1.10. Maak seker die spanning soos aangedui op die gradering etiket kom ooreen met die hoofspanning.
2.2.11. Heg die toestel aan op die stroomtoevoer met 'n oortekking wat ten minste 10 ampère behels.
2.1.12. Die toestel prop moet in die hoof prop pas en moenie die prop verander.
2.1.13. As 'n multi prop gebruik word, moet die graderings noukeurig nagegaan word, aangesien die stroom wat deur verskeie toestelle gebruik word maklik die aanslag van die multiplug kan oorskry.
2.1.14. Moenie die toestel gebruik as die prop of koord beskadig is nie of enige sigbare skade aan die omhulsel is nie.
2.1.15. Moenie die toestel gebruik as dit op die vloer geval het en daar is sigbare skade.
2.1.16. Moenie die koord gebruik om die toestel te dra, op te tel of van diemuurprop te ontkoppel nie.
2.1.17. Die koord mag nooit om die toestel gedraai word nie.
2.1.18. Moenie die koord plooi nie.
2.1.19. Die koord Moenie oor die kant van die tafel of toonbank hang of aan warm oppervlaktes raak nie.
2.1.20. Kontroleer die toestand van die netsnoer. Beskadig of Verstrengelde kables verhoog die risiko van elektriese skok.
2.1.21. Die toestel is nie geskik vir buite gebruik nie.
2.1.22. Voeding moet gereeld ondersoek word Tekens van skade, en as die koord beskadig is, moet die Nasien moet nie gebruik word nie.
2.1.23. Moenie die prop met nat hande aanraak nie.

2.4. Diens:
2.4.1. Die toestel moet deur 'n gekwalifiseerde tegnikus gedien word.
2.4.2. As die koord beskadig word moet dit deur die diessagent of 'n gekwalifiseerde persoon vervang word om brandgevaar te verhoed.
2.4.3. Enige misbruik en mislukking om instruksies te volg lewer die waarborg nul en van gener waarde.

3. Instruksies vir gebruik
3.1. Voor gebruik:
3.1.1. Verwyder alle verpakking materiaal voor gebruik
3.1.2. Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel.

3.2. Hoe om waaier aanmekeer te heg:
3.2.1. Steek die V-vormige ondersteuningsbuis in die reguit buis van die waaierbasis

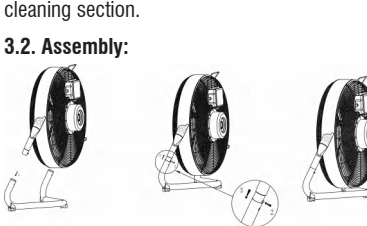

3.2.1. Insert the V-shaped support tube into the straight tube of the fan base until it reaches the limit bump.
3.2.2. Press and hold the limit bump.
3.2.3. Continue to insert the V-shaped tube further into the straight tube until the limit bump snaps securely into the limit hole of the V-shaped tube.
3.2.4. Remove any protective film or packaging materials from the fan (if applicable).
3.2.5. For optimal performance and hygiene, clean the fan's exterior as described in the "Cleaning" section (Section 4) before using it for the very first time.

3.3. Use and care:
3.3.1. Turning the fan on:
3.3.1.1. Place the fan on a stable, level surface.
3.3.1.2. Connect the fan to a standard mains power outlet.
3.3.1.3. Select your desired airflow using the speed selection buttons on the control panel:
0. Stop fan (Power off)
1. Minimum air flow
2. Medium air flow
3. Maximum air flow
3.3.2. Once you have finished using the appliance:
3.3.2.1. Allow the fan blades to come to a complete stop by selecting "0" (Stop fan).
3.3.2.2. Unplug the fan from the mains power supply.
3.3.2.3. Clean the fan as described in the "Cleaning" section (Section 4).

4. Cleaning:
4.1. Always disconnect the fan from the mains power supply and ensure it has completely stopped before undertaking any cleaning task.
4.2. Clean the fan's outer parts (grilles and body) with a soft, damp cloth moistened with

2.3. Gebruik en sorg:
2.3.1. Die kabel moet ten volle afgewikkel word voor gebruik
2.3.2. Die toestel moet nie gebruik word as die parte of bykomstighede nie behoorlik pas.
2.3.3. Die toestel moet nooit leeg gebruik word nie.
2.3.4. Die Toestel moet nooit gedraai word terwyl dit in werking is of in die muurprop gekoppel is.
2.3.6. Ontkoppel die toestel van die hooftoevoer as dit nie in gebruik is nie en laat dit heeltemal afkoel voordat dit skoongemaak word. As dele afgehaal word of toegevoeg word, moet die toestel nie in werking wees nie.
2.3.7. Die toestel moet buite bereik van kinders gestoor word.
2.3.8. Die toestel moet heeltemal afkoel voor dit gestoor word.
2.3.9. Die toestel moet altyd onder toesig wees wanneer in gebruik en moet buite bereik van kinders gehou word.

2.4. Diens:
2.4.1. Die toestel moet deur 'n gekwalifiseerde tegnikus gedien word.
2.4.2. As die koord beskadig word moet dit deur die diessagent of 'n gekwalifiseerde persoon vervang word om brandgevaar te verhoed.
2.4.3. Enige misbruik en mislukking om instruksies te volg lewer die waarborg nul en van gener waarde.

3. Instruksies vir gebruik
3.1. Voor gebruik:
3.1.1. Verwyder alle verpakking materiaal voor gebruik
3.1.2. Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel.

3.2. Hoe om waaier aanmekeer te heg:
3.2.1. Steek die V-vormige ondersteuningsbuis in die reguit buis van die waaierbasis

a few drops of mild washing-up liquid. Then, wipe thoroughly with a clean, dry cloth. (CAUTION) Do NOT attempt to remove the grilles. Never immerse any electrical parts of the fan in liquid. To clean dust from within the grilles, you may use a soft brush or a vacuum cleaner with a brush attachment.
4.3. Do NOT use harsh solvents, abrasive cleaners, or products with an acid or base pH (such as bleach) for cleaning. These can damage your fan's surfaces.
4.4. Never submerge the fan in water or any other liquid, and do not place it under running water

5. Anomalies and repair:
5.1. Take the appliance to an authorised support centre if product is damaged or other problems arise.
5.2. If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

6. Recycling
6.1. These electrical products, cables, batteries, packaging, and the manual, should not be mixed with general household waste. For proper recycling, please take these products to your nearest Creative Housewares office where they will be accepted for recycling free of charge.
6.2. Alternatively, please contact your local authority or household waste disposal service for further details of your nearest designated collection point. Correct product disposal saves resources and prevents negative effects on human health and the environment.

2.1. Gebruik en werksomgewing:
2.1.1 Hou die werk oppervlak skoon en helder verlig. Ongelukke gebeur in donker areas
2.1.2. Gebruik die produk in n goed geventileerde area.
2.1.3. Moenie die toestel naby 'n warm gas of elektriese brander of qn warm oond plaas nie.
2.1.4. Streng toesig is nodig as die toestel naby of deur kinders gebruik word
2.1.5. Plaas toestel op stabiele area en weg van water
2.1.6. n Brand mag ontstaan as die toestel bedek word.
2.1.7. Moenie vlambare materiaal naby toestel plaas nie.

2.2. Belangrike veiligheids voorsorg:
Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel. Lees die instruksies deeglik en bewaar

 
3.3. Gebruik en versorging:
3.3.1. Aansakel van die waaier:
3.3.1.1. Plaas die waaier op 'n stabiele, gelyk oppervlak.
3.3.1.2. Koppel die waaier aan 'n standaard kraagaansluiting.
3.3.1.3. Kies die verlangde lugvloei met die spoedkeuseknoppies op die beheerpaneel:
0. Stop waaier (Skakel af)
1. Minimum lugvloei
2. Medium lugvloei
3. Maksimum lugvloei

3.3.2. Sodra u klaar is met die gebruik van die toestel:
3.3.2.1. Laat die waaierlemme heeltemal tot stilstand kom deur "0" te kies (Stop waaier).
3.3.2.2. Ontkoppel die waaier van die kragtoevoer.
3.3.2.3. Maak die waaier skoon soos beskryf in die afdeling "Skoonmaak" (Afdeling 4).

4. Skoonmaak:
4.1. Ontkoppel altyd die waaier van die kragtoevoer en maak seker dat dit heeltemal tot stilstand gekom het voordat u enige skoonmaaktaak onderneem.
4.2. Maak die waaier se buitenste dele (roosters en romp) skoon met 'n sagte, klam lap wat met 'n paar druppels sagte opwas-middel bevochtig is. Vee dit dan deeglik af met 'n skoon, droë lap.
(VERSIGTIG! Moenie probeer om die roosters te verwyder nie. Moet nooit enige elektriese dele van die waaier in vloeistof dompel nie.)
Om stof van binne die roosters skoon te maak, kan jy 'n sagte borsel of 'n stofsuiwer met 'n borselaanhegsel gebruik.
4.3. MOENIE harde oplosmiddels, skuurmiddels of produkte met 'n suur- of basis-pH (soos bleikmiddel) vir skoonmaak gebruik nie. Dit kan jou waaier se oppervlaktes



Geagte klient,
Dankie vir u keuse om 'n Mellerware handelsmerk produk te koop. Danksy die tegnologie, ontwerp en werking en die feit dat dit voldoen aan die strengste gehalte standaarde, is U verseker van 'n volle bevredigende gebruik en lang produklewe.

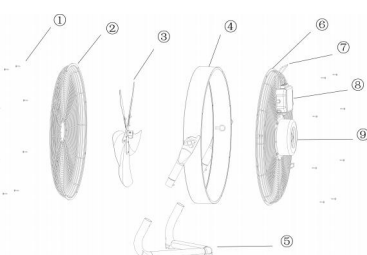

1. Parte beskrywing:

- 1.1. Skroewe
- 1.2. Voorste rooster
- 1.3. Lemme
- 1.4. Silinder
- 1.5. Voete
- 1.6. Skakelaar vir agterste rooster
- 1.7. Handvatsel
- 1.8. Spoedkeuses
- 1.9. Motor

2. Belangrike veiligheids voorsorg:

Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel. Lees die instruksies deeglik en bewaar

2.1. Gebruik en werksomgewing:
2.1.1 Hou die werk oppervlak skoon en helder verlig. Ongelukke gebeur in donker areas
2.1.2. Gebruik die produk in n goed geventileerde area.
2.1.3. Moenie die toestel naby 'n warm gas of elektriese brander of qn warm oond plaas nie.
2.1.4. Streng toesig is nodig as die toestel naby of deur kinders gebruik word
2.1.5. Plaas toestel op stabiele area en weg van water
2.1.6. n Brand mag ontstaan as die toestel bedek word.
2.1.7. Moenie vlambare materiaal naby toestel plaas nie.

2.2. Belangrike veiligheids voorsorg:
Voor die toestel vir die eerste keer gebruik word maak alle parte skoon wat met kos in aanraking kom soos voorgeskryf in skoonmaak artikel. Lees die instruksies deeglik en bewaar

5. Anomalieë en herstel:
5.1. Neem die toestel na 'n gemagtigde tegniese diens sentrum as die toestel beskadig is of probleme ontstaan
5.2. As konneksie na die muurprop beskadig is, moet die toestel vervang of herstel word volgens waarborg.

6. Herwinning
6.1. Hierdie elektriese produkte, kables, batterye, verpakking en die handleiding moet nie met algemene huishoudelike afval gemeng word nie. Vir behoorlike herwinning, neem hierdie produkte na u naaste kantoor vir Creative Housewares, waar dit gratis aanvaar word vir herwinning.
6.2. Kontak u plaaslike owerheid of huishoudelike vullisdienste vir nadere besonderhede oor u naaste aangewese versamelpunt. Korrekte produkverwydering bespaar hulpbronne en voorkom negatiewe gevolge vir menslike gesondheid en die omgewing.

