



Health and safety

Please read these instructions carefully before using your Mico Potato.

- Not suitable for conventional ovens or hobs/grills or combination microwave ovens.
- Ensure caution is taken when removing cookware from the microwave oven as it may be hot.
- Allow metals parts to cool before removing.
- Ensure metal parts are correctly fitted into moulded housing with no exposure, to prevent sparks occurring during cooking in microwave oven.
- Do not use repeatedly more than twice, allow to cool for 30 minutes.
- Not for commercial use. Household use only.
- If using microwave ovens under 23L, stop and allow to cool half way through cooking.
- Do not use for more than 20 minutes continuously.

Your 1 year guarantee

Guarantee only available in the UK and Ireland. It is important to retain the retailer's receipt as proof of purchase. All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase. Subject to exclusions, the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt. If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase. To qualify for the guarantee, the appliance must have been used according to the instructions supplied.

Cleaning and Care

Cleaning your Mico Potato after each use will prolong its life.

- Fully disassemble your Mico Potato to enable thorough cleaning (see overleaf for assembly instructions).
- All parts are dishwasher safe.
- If hand washing, do so in warm soapy water with a soft cloth to protect the non-stick coating on metal parts. Do not use scouring pads or abrasive chemicals.
- Do not use metal utensils when removing food from your Mico Potato. Metal utensils may damage the non-stick coating on metal parts.
- Clean thoroughly before first use.

Contact Us

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker:

UK: 0344 871 0944 | EIRE: 1800 409 119 | SPARES: 0344 873 0710

POSTAL: The After Sales Division, Morphy Richards Ltd
Mexborough, South Yorkshire, England, S64 8AJ

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog: www.morphyrichards.co.uk/blog/

Facebook: [morphyrichardsuk](https://www.facebook.com/morphyrichardsuk)

Twitter: [@loveyourmorphy](https://twitter.com/loveyourmorphy)

Instagram: [morphyrichardsuk](https://www.instagram.com/morphyrichardsuk)

Website: www.morphyrichards.com



Discover the rest of the innovative **Mico** range
at www.morphyrichards.com

morphy richards[®]

mico POTATO 
microwave cookware

The **new** method
in your Microwave





Product overview

- 1 Lid**
- 2 Metal inner pot**
Coated in Heatwave Technology, fitted together they cook potatoes like a conventional oven.
- 3 Base**



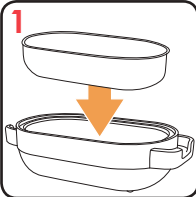 
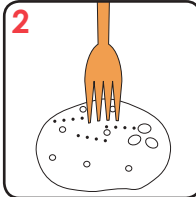 
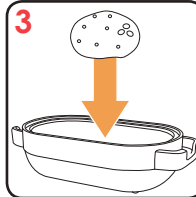 
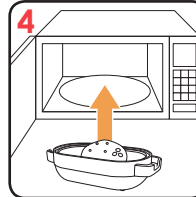 
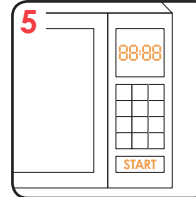 
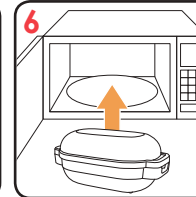 
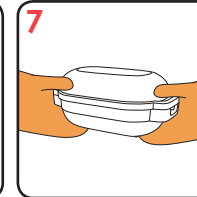 
Assembly instructions

- 1** Place the metal inner pots into the silicone lid and base, ensuring they are fitted securely.
- 2** With the metal inner pots facing each other, place the lid onto the base, ensuring the inner pots are aligned.
- 3** Align the base and lid together.

Disassembly instructions

- 1** Lift off the lid.
- 2** Turn the base and lid so the metal inner pots are facing upwards.
- 3** Lift the metal inner pots out of the silicone housing.

How to use

						
Assemble your Mico Potato (ensuring metal inner pots are housed within the silicone lid and base).	Prick potato(es) with knife or fork several times.	Add one or two potato(es) to bottom metal inner pot.	Place in microwave oven, leaving the lid off.	Enter the correct time for your microwave oven and press start.	After 6 to 8 minutes (depending on your microwave oven power), place lid on base. Continue to cook for 9 to 11 minutes.	Remove with oven gloves. Remove lid and serve.

Microwave oven times

- Max 1200W microwave oven.
- Microwave oven times may vary.
- Do not use repeatedly more than twice, allow to cool for 30 minutes.
- Timings may be adjusted to suit your personal tastes.

1 Baked potato

Microwave oven power	Lid off initially	Lid on for additional
1000W - 1200W	6 mins - 7 mins	9 mins - 10 mins
900W - 1000W	7 mins - 8 mins	10 mins - 11 mins
800W - 900W	7 mins - 8 mins	10 mins - 11 mins

2 Baked potatoes

Microwave oven power	Lid off initially	Lid on for additional
1000W - 1100W	7 mins - 8 mins	9 mins - 10 mins
900W - 1000W	8 mins - 9 mins	10 mins - 11 mins
800W - 900W	8 mins - 9 mins	10 mins - 11 mins