REPLACING THE FILTER CARTRIDGE

- Remove the lid and lift the inner vessel out of the jug.
- Hold the inner vessel and rotate the used filter cartridge anti-clockwise to release it.
- Prepare and insert the new filter cartridge as per the previous instructions.

FOR BEST RESULTS

- To prevent the filter from drying out, the water filter should not be left unused for long periods. If such an extended period is anticipated (such as a holiday), then it is best to remove the filter and store in a sealed plastic bag in the fridge. The filter can then simply be prepared as per the original fitting instructions.
- Store the filter jug in the refrigerator or in a cool location. It is important to store the jug out of direct sunlight and away from heat sources.
- In the event of the filtered water not being used for more than 48 hours, we recommend that the water is discarded and the filter jug re-filled with fresh water.
- We recommend that the inner vessel and jug are washed and rinsed regularly. The lid should be wiped clean with a damp cloth as required.
- Use only cold or room temperature water for filtering.
- Do not apply concentrated cleaning agents such as heavy oxidants, bleach, or chlorinated solvents to any part of this product. Do not use abrasive pads on the product.
- Do not use the filter jug for any purpose other than filtered water.



creative housewares

20 Tekstiel Street, Parow, Cape Town, 7493, South Africa P.O. Box 6156 Parow East, 7501, South Africa **2** + 27 21 931 8117 Service Centre Helpline: 086 111 5006 www.creativehousewares.co.za



COMPACT

INSTRUCTIONS FOR USE



AVAILABLE IN 5 COLOURS














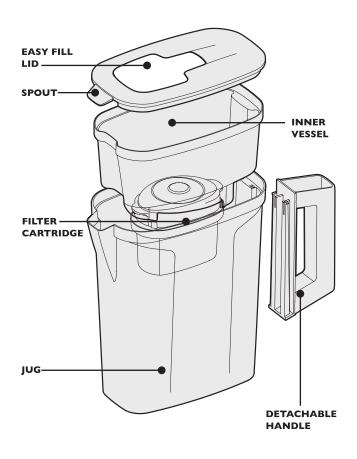

BEFORE USING THE FILTER JUG FOR THE FIRST TIME

- 1. Remove all packaging from the jug.
- Remove the lid from the jug. The lid should be wiped clean with a damp cloth.
- 3. Wash and rinse the inner vessel and jug.

PREPARING THE WATER FILTER CARTRIDGE

Remove all packaging from the filter cartridge.
 There may be a small residue of black carbon particles in the bag or adhering to the cartridge body; this is normal. These particles are harmless and are washed off during the preparation process.



- 2. Soak the cartridge in a bowl of water for 5-10 minutes to remove all air bubbles.
- 3. Flush for I minute under a running tap.
- 4. The filter cartridge is now ready for use.

FITTING THE FILTER INTO THE INNER VESSEL

- Fit the Aqua Optima Evolve filter cartridge into the underside of the inner vessel and rotate clockwise to lock into place. Ensure it is firmly secured.
- Place the inner vessel back into the filter jug ensuring the flat edge of the inner vessel is facing towards the front of the jug.
- 3. Replace the lid.
- Fill the inner vessel with cold water and allow it to pass through the filter. Once it has been filtered, discard the water and repeat the process once more.
- 5. Fill the inner vessel for a third time; your filter jug is now ready for use.







EVOLVE FILTRATION SYSTEM

The Aqua Optima Evolve is a unique water filtration system developed to deliver the purest filtered water quickly - removing high levels of chlorine, limescale, organics, herbicides, pesticides, lead and other heavy metals.

AQUA OPTIMA EVOLVE 30-DAY FILTER CARTRIDGE

To ensure the best performance, the filter cartridge should be changed after 100 litres, which is approximately 4 weeks of typical use.

AQUA OPTIMA EVOLVE 60-DAY DOUBLE LIFE FILTER CARTRIDGE

To ensure the best performance the filter cartridge should be changed after 200 litres which is approximately 8 weeks of typical use.

WARNING

This product is intended to filter tap water only. Do not put water of unknown quality or that has been microbiologically impaired into the product.

READ ALL INSTRUCTIONS
BEFORE USE & SAVETHEM
FOR FUTURE REFERENCE