

# Lucky<sup>®</sup>

LIFESTYLE



## CURLING TONG

complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

*L*  
16 W

1 YEAR  
WARRANTY

Model:  
LT9.5; LT13;  
LT19; LT25;

PLEASE READ ALL INSTRUCTIONS BEFORE USE



When using an electrical appliance, basic safety precautions should always be followed including the following:

1. Carefully read all instructions before using appliance.
2. Do not immerse in water or other liquid, do not use while bathing with wet hands or over a filled sink.
3. Close supervision is necessary when an appliance is used by children or invalids.
4. Unplug the appliance from outlet when not in use and before cleaning. Do not leave appliance unattended when it is operating.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance or dealership where purchased for repair.
6. Use appliance only for intended use, namely curling hair,
7. This unit is hot when in use. To avoid burn hazard, so not let are skin touch heated surfaces.
8. Do not place heated tongs on any heat sensitive surface when hot or plugged in.
9. Do not use water for cleaning the appliance.
10. Keep these instructions.

#### **INSTRUCTION FOR USE**

Do not use your curling iron on a wig or hairpiece made of something that may burn, or a wig or hair-

piece that may still have some of the cleaner on it.

#### **TO CURL HAIR**

1. Hair must be thoroughly dry and brushed clean.
2. Comb and section the hair, evenly before the winding.
3. Determine the hair style. Both the hair roll volume and barrel size of curling tong accounts of the curls, whilst more hair will give you looser curls, smaller tong smaller curl roll less hair tighter curls, whilst more hair will give you looser curls.
4. In styling hair must be held tight in order to be in shape. Slide the appliance from the scalp to the hair ends, and from then, start winding or straightening.
5. For a lasting curl turn the appliance at least one and a half times around the hair and hold for a few seconds. Let your hair cool down first before combing and brushing.
6. When setting curls close to the scalp, the heat may be of discomfort. Be careful not to burn the scalp.

#### **STORAGE**

When not in use, disconnect the appliance, let cool and store in a dry, safe location, out of reach of children.



Lucky guarantees that this product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. However, should defects due to faulty material or workmanship develop, under normal domestic use, within 6 months from the date of purchase please return the product to the store from where it was purchased for a full refund or replacement.

The following conditions apply:

- 1) Please ensure you retain your receipt as this must be presented when making a claim under the terms of the warranty. It is impossible to determine the warranty period without proof of purchase, so please keep this in a safe place.
- 2) If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the warranty void.
- 3) Upon receipt of your appliance check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The warranty is void if products are damaged after use, so please do not use the damaged product.
- 4) Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your warranty void, so please read these instructions carefully to ensure your safety, and get the most effective use from the product. (e.g. lime scale; water deposits; and/or insect infestation)
- 5) Any abuse, negligent, improper or accidental use or care will render the warranty void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
- 6) Any attempted repair, or replacement of unauthorised parts will render the warranty void, so please contact an authorised service centre or agent for any service or repair requirements.

#### Extended 12 Month Limited Warranty

Lucky offer an extended 12 month limited warranty from the date of purchase to offer the consumer peace of mind on their purchase. Should defects due to faulty material or workmanship develop, under normal domestic use, within 12 months from the date of purchase, please return the product to the store from where it was purchased for replacement.

Before returning your product, check for the following:

- 1) Your household mains supply socket is working and switched on.
- 2) The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- 3) You have read the trouble shooting guide in your Instructions for Use.
- 4) All accessories and parts are present.

If service or repair becomes necessary outside the warranty period, this service is still available however all transport/postage, spares and labour costs will be paid by the consumer. All chargeable repairs will require the consumers' approval in writing once the quote is accepted. Once the go-ahead has been received Lucky will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received.

All repairs carry a 3 month warranty. Lucky will attempt to conduct repairs within reasonable industry standards but cannot be held responsible or liable for any circumstances not under their direct control.

**National Service Centre: 086 111 5006**

**e-mail: [help@creativehousewares.co.za](mailto:help@creativehousewares.co.za)**

**creative housewares**

web: [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

#### **Cape Town**

20 Tekstiel Street, Parow, Cape  
Town, 7493, South Africa • P.O. Box  
6156 Parow East, 7501, South Africa  
Tel: +27 21 931 8117  
Fax: +27 21 931 4058

#### **Durban**

35 Adrian Road, Windermere,  
Durban, South Africa, 4001  
Tel: +27 31 303 3465  
Fax: +27 31 303 8259


#### **Johannesburg**



9 Hamburg Road, Aeroport,  
Spartan, Johannesburg,  
South Africa  
Tel: +27 11 392 5652  
Fax: 086 567 9222

**1 year warranty**


## creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117       +27 21 931 4058

Service Centre Helpline: 086 111 5006

 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)