

**mellerware®**

makes life easier

## HURRICANE fold away washline



7.7 Meters of  
drying space

Folds up for  
easy storage

Easy Lock System



**m**

**2 YEAR  
WARRANTY**

Model:  
MELCL02

### Installation:

1. Ensure the wall surface that the wash line bracket will be mounted against is smooth and free of obstructions that might prevent it from being securely attached to the wall.
2. The wash line should be secured to the wall with 4 M10 coach screws and wall plugs or the 4 supplied M8 rawl bolts.
3. Hold the wash line bracket vertically against the wall, use a spirit level to make sure the bracket is straight, and mark holes for drilling (fig. 1).
4. Measure the distance from the ground to the lower marking.
5. Measure 1200mm across from the lower marking. Then mark on the wall at the same height between the ground and lower marking as for the first bracket, measured in point 4.
6. Place the bracket over the lower marking so that the marking is visible through the lower hole of the bracket. Using a spirit level hold the bracket against the wall and make a marking through the upper hole in the bracket.
7. Drill holes where you have made markings using an appropriately sized masonry bit.
8. Mount both brackets using coach screws or rawl bolts as mentioned in point 2. Tighten until brackets are securely mounted to the wall (fig 2).
9. Insert the detachable horizontal bar.
10. Once the bracket has been properly secured, the wash line may now be extended and used.
11. If the cords are sagging, it is possible to pull them tighter. Find the end of the cord and pull until tight enough and then make a knot so that the cord cannot return through the hole.


### Use:

1. Extend the wash line by pulling the detachable front bar upwards (fig. 2).
2. Once the arms are fully extended, the locking pin should slot into place to secure the wash line in a horizontal position (fig. 3).
3. When the wash line is no longer needed, slide both support arms upwards so that the locking pin slides into the upper slot.
4. Push down front bar to fold away wash line into vertical position (fig. 1).


### General:


1. This wash line is recommended for light to medium weight items, for example; socks, underwear, shorts, shirts, trousers, jackets, sheets etc.
2. In order to prevent the wash line from sagging over time, always ensure that it is evenly loaded

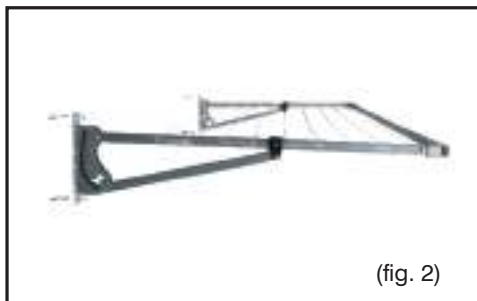

- with clothing items. This will keep the wash line straight and ensure that the clothing items dry equally.
3. Do not hang on the wash line.
4. When the wash line is not in use, fold it away as explained in the 'Use' section.
5. In order for clothes to dry quickly and sufficiently, allow space between the clothing items so that wind and sunlight can pass through.
6. Do not pull on the cords to fold the wash line away. This puts unnecessary tension on the cords and will cause them to sag over time.
7. Do not place any additional tension or strain on the arms or brackets.
- 8.




creative housewares

 20 Tekstiel St, Parow, Cape Town, 7493, RSA

 P.O. Box 6156 Parow East, 7501, RSA

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)