

REGISTER YOUR MELLERWARE WARRANTY

Thank you for purchasing a Mellerware Product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The Warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim, and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period, the extended online registration 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be a valid warranty claim, and will return it to you directly. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration and opt-in-email communication. Should you wish to qualify for the additional third year extended warranty, you would need to have registered your warranty within the first 12 months from date of purchase and subscribed to receive brand communication. The extended warranty is conditional upon these requirements. Please note that you are however free to opt out at any stage in accordance with the POPI act, this will however result in you forfeiting this additional extended “communication opt in” warranty from the recorded opt-out date.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 year's warranty.

ADDED BENEFITS

- In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:
- Discount vouchers on product warranty registration
 - Incentives and Competitions for registered users
 - New recipes or ideas for your products
 - New product developments - be the first to get the latest appliances
 - Special offers on promotional items

How to Register your Online Warranty?



DESKTOP/
LAPTOP

- Open your internet browser and visit www.mellerware.co.za
- Click on the “Register” link and create your username and password. Or if you have done this already login with your username and password.
- Click on “Register your Warranty” and follow the easy instructions.
- Scan and upload your receipt.



SMART PHONE/
TABLET

- Open your internet browser and visit www.creativehousewares.co.za
- Click on the “Register” link and create your username and password. Or if you have done this already login with your username and password.
- Click on “Register your Warranty” and follow the easy instructions.
- Scan and upload your receipt.

Notes:

- The online warranty system is a safe storage facility for your receipt.
- You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
- From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
- All instructions on how to load your products are available inside your profile.
- Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
- For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

Durban
20 Tekstil Street, Parow, Cape Town, 7493, RSA
PO Box 6156, Parow East, 7501, RSA
+27 21 931 8117 | +27 79 890 6862
+27 86 111 5006 | [chwsa.co.za](http://www.creativehousewares.co.za)
www.creativehousewares.co.za


Johannesburg

25 & 26 San Croy Office Park
Agora Road, Croydon, 1619, RSA
+27 11 392 5562




Dear Customer

Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

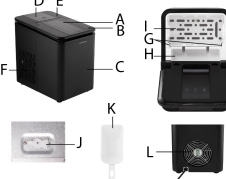

1.1. Parts description:

- A. Transparent Window
- B. Front Lid
- C. Main Body
- D. Control Panel
- E. Top Panel
- F. Air Inlet
- G. Ice Full Sensor
- H. Ice Scoop Panel
- I. Ice Bucket
- J. Silicone Plug
- K. Ice Scoop
- L. Fan Motor



1.2. Panel Display:

- A. Ice Full Indicator
- B. Power Indicator
- C. Lack of Water Indication
- D. On/Off Button

2. Safety advice and warnings!


Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product, as indicated in the cleaning section, before use.

2.1. Use or working environment:

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well-ventilated area.
- 2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
- 2.1.4. Keep children and bystanders away when using this appliance.
- 2.1.5. Place the appliance on a horizontal, flat, stable surface and away from other heat sources and contact with water.
- 2.1.6. Keep the appliance away from flammable material such as textiles, curtains, cardboard or paper, etc.
- 2.1.7. Do not place flammable material near the appliance.
- 2.1.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches


- in use and keep out of the reach of children, as this is an electrical appliance that reaches high temperatures and may cause serious burns. (If applicable).
 - 2.3.9. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT.
 - 2.4. Service:
 - 2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.
 - 2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
 - 2.4.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.
 - 2.5. Opening the package:
 - 2.5.1. Remove all the external and internal packages and check if all parts are inside.
 - 2.5.2. Take out the ice storage bucket and wash it in clean water. Use clean water to wash the water tank.
 - 2.5.3. Wash the evaporator columns with clean water or alcohol.
 - 2.5.4. Please keep the ice maker away from direct sunlight, heat or radiation. Place the ice maker horizontally and make sure there is at 15cm gap between the sides and rear.
 3. Operation:
 - 3.1. Before first use:
 - 3.1.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.1.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.1.3. Discard the ice from the first two cycles of ice production.
 - 3.1.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
 - 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
 - 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
 - 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3.3. Discard the ice from the first two cycles of ice production.
 - 3.3.4. When you first connect the machine to the power supply, the initial ice cubes produced may be smaller. This is not a malfunction.
- 3.2. Use:
 - 3.2.1. Open the front cover, remove the ice bucket, and add water to the water tank. The water level should not exceed the maximum fill line.
 - 3.2.2. Place the ice bucket back into the machine, ensuring it is properly seated. If it is not in place, press gently on the bottom of the bucket until it is securely installed.
 - 3.2.3. Press the "ON/OFF" button on the control panel to start the machine. The power indicator light will turn on, and the machine will begin making ice.
 - 3.2.4. The first ice-making cycle takes approximately 9 minutes. The size of the ice cubes depends on the water and ambient temperatures.
 - 3.2.5. Regularly check the water level in the tank. If the water level is too low, the pump will not be able to function, and the ice maker will stop automatically. The low water indicator will light up, and the buzzer will beep. To resume operation, fill the water tank to below the maximum level and press the "ON/OFF" button again.
 - 3.2.6. When the ice bucket is full, the machine will automatically stop making ice. The "full" indicator light will turn on, and the buzzer will beep. Ice production will resume automatically once the ice level drops below the infrared detection position.
- 3.3. Before first use:
 - 3.3.1. Before using the ice maker for the first time, it is highly recommended to clean the entire machine thoroughly, as outlined in the "Cleaning" section.
 - 3.3.2. If the machine is new or has not been used for a long time, flush the water tank and drain the water from the drainage outlet. This helps to remove any residual odour or dust particles.
 - 3.3

Espanol
Estimado cliente,
Gracias por elegir comprar un producto de la marca Mel-lerware. Gracias a su tecnología, diseño y funcionamiento, y al hecho de que supera los más estrictos estándares de calidad, puede garantizarse un uso totalmente satisfactorio y una larga vida del producto.

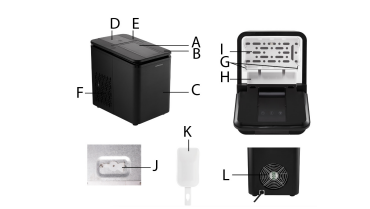

1. Descripción de las piezas:

A. Ventana transparente
B. Tapa frontal
C. Cuerpo principal
D. Panel de control
E. Panel superior
F. Entrada de aire
G. Sensor de hielo lleno
H. Panel de la pala de hielo
I. Cubeta de hielo
J. Tapón de silicona
K. Pala de hielo
L. Motor del ventilador



1.2. Pantalla:

A. Indicador de hielo lleno
B. Indicador de encendido
C. Indicador de falta de agua
D. Botón de encendido/apagado

2. Consejos y advertencias de seguridad!

Lea atentamente estas instrucciones antes de encender el aparato y consérvelas para futuras consultas. No seguirías podría provocar un accidente. Limpie todas las piezas del producto, como se indica en la sección de limpieza, antes de usarlo.

2.1. Uso o ambiente de trabajo:

2.1.1. Mantenga el área de trabajo limpia y bien iluminada. Las áreas obstruidas y oscuras invitan a accidentes.
2.1.2. Utilice el aparato en un lugar bien ventilado.
2.1.3. No coloque el aparato sobre superficies calientes, tales como placas de cocción, quemadores de gas, hornos o artículos similares.
2.1.4. Mantenga alejados a los niños y transeúntes cuando utilice este aparato.
2.1.5. Coloque el aparato sobre una superficie horizontal, plana, estable. Superficies y lejos de otras fuentes de calor y con agua.
2.1.6. Mantenga el aparato lejos de materiales inflamables. Como tejidos, cortinas, cartón o papel, etc.

2.1.7. No coloque material inflamable cerca de la aplicación.
2.1.8. No utilice el aparato en combinación con un programador, temporizador u otro dispositivo que lo encienda automáticamente.
2.1.9. No utilice el aparato si el cable o el enchufe están dañados.
2.1.10. Asegúrese de que la tensión indicada en la etiqueta de características coincida con la tensión de red antes de enchufar el aparato.
2.1.11. Conecte el aparato a la red eléctrica con un enchufe de tierra de un mínimo de 10 amperios.
2.1.12. El enchufe del aparato debe encajar correctamente en la toma de corriente. No altere el enchufe.
2.1.13. Si se utiliza un multi enchufe comprobar la sujeción de la multi-enchufe.
2.1.14. Utilice el aparato únicamente con la unidad de control de temperatura específica suministrada.
2.1.15. Si alguna de las carcassas del aparato se rompe, desconéctelo inmediatamente de la red eléctrica para evitar una posible descarga eléctrica.
2.1.16. No utilice el aparato si se ha caído al suelo o si presenta daños visibles.
2.1.17. No fuerce el cable de alimentación. Nunca utilice el cable de alimentación para levantar, transportar o desenchufar el aparato.
2.1.18. No enrolle el cable de alimentación alrededor del aparato.
2.1.19. No corte ni doble el cable de alimentación.
2.1.20. No permita que el cable de alimentación cuelgue ni entre en contacto con las superficies calientes del aparato.
2.1.21. Compruebe el estado del cable de alimentación. Los cables dañados o enredados aumentan el riesgo de descarga eléctrica.
2.1.22. El aparato no es apto para uso en exteriores.
2.1.23. El cable de alimentación debe revisarse periódicamente para detectar posibles daños. Si está dañado, no se debe utilizar el aparato.
2.1.24. No toque el enchufe con las manos mojadas.

2.2. Seguridad personal:

2.2.1. **PRECAUCIÓN:** No deje el aparato desatendido durante el uso, ya que existe el riesgo de un accidente.
2.2.2. No toque las partes giratorias del aparato, ya que podría causar lesiones graves.
2.2.3. Este aparato es sólo para uso doméstico, no para uso industrial o profesional. No está destinada a ser utilizada por los huéspedes en ambientes de hospitalidad como bed and breakfast, hoteles, moteles y otros tipos de ambientes residenciales, incluso en casas de granja, áreas del personal de cocina en tiendas, oficinas y otros ambientes de trabajo.
2.2.4. Este aparato no está destinado a ser utilizado por personas (incluyendo niños) con capacidades físicas, sensoriales o mentales reducidas, o por falta de experiencia y conocimiento, a menos que hayan recibido supervisión o instrucciones sobre el uso del aparato por una persona responsable de su uso la seguridad.
2.2.5. Este aparato no es un juguete. Los niños deben ser supervisados para asegurarse de que no juegan con el aparato.

2.3. Uso y cuidado:

2.3.1. Desenrolle completamente el cable de alimentación antes de usarlo.
2.3.2. No utilice el aparato si las piezas o accesorios no están correctamente instalados.
2.3.3. No dé la vuelta al aparato mientras esté en uso o conectado a la red eléctrica.
2.3.4. Utilice las asas del aparato para transportarlo o

bien en place.
3.2.3. Aprietez sur le bouton « MARCHE/ARRÊT » du panneau de commande pour démarrer la machine. Le voyant d'alimentation s'allumera et la machine commencera à fabriquer des glaçons.
3.2.4. Le premier cycle de fabrication de glaçons dure environ 9 minutes. La taille des glaçons dépend de la température de l'eau et de la température ambiante.
3.2.5. Vérifiez régulièrement le niveau d'eau dans le réservoir. Si le niveau d'eau est trop bas, la pompe ne fonctionnera pas et la machine à glaçons s'arrêtera automatiquement. Le voyant de niveau d'eau bas s'allumera et un signal sonore retentira. Pour reprendre l'utilisation, remplissez le réservoir d'eau jusqu'en dessous du niveau maximum et appuyez à nouveau sur le bouton « MARCHE/ARRÊT ».

3.2.6. Lorsque le bac à glaçons est plein, la machine arrête automatiquement la production de glaçons. Le voyant « plein » s'allume et un signal sonore retentit. La production de glaçons reprend automatiquement dès que le niveau de glaçons descend en dessous du seuil de détection infrarouge.
3.2.7. Pour arrêter ou annuler la fabrication de glaçons, appuyez sur le bouton « MARCHE/ARRÊT ». La machine passe alors en mode veille.
3.2.8. Il est recommandé de changer l'eau toutes les 24 heures pour maintenir la propreté. Si la machine n'est pas utilisée pendant une longue période, débranchez-la, vidangez toute l'eau du réservoir et essuyez-le.

5. Analyse et traitement des pannes:

Échec:	Cause:	Solution:
La machine fonctionne mais ne fait pas de glace.	Le compresseur est en protection de démarrage ou il y a une fuite de réfrigérant.	Attendez 30 minutes pour que la machine fonctionne normalement. Si elle ne démarre toujours pas, contactez un prestataire de services.
Le cycle de fabrication de glaçons dure trop long.	1. Le bac à glaçons contient trop de pièces. 2. La température de l'eau est trop basse.	1. Réglez l'évaporateur. 2. Remplacez l'eau du réservoir par une eau dont la température est comprise entre 5 °C et 32 °C.
La machine est pleine de glaçons, mais le voyant lumineux ne s'allume pas.	La machine est placée dans un endroit fortement éclairé, ce qui affecte le capteur infrarouge.	Déplacez la machine dans un endroit plus sombre.
Le panneau de la pelle à glaçons est bloqué.	Il y a trop de glaçons dans le bac.	Retirez-en un peu.
La machine ne fonctionne pas.	Le capteur de remplissage est cassé.	Cessez d'utiliser la machine et contactez votre fournisseur pour une réparation.

6. Anomalies et réparation:

6.1. Prenez l'appareil dans un centre d'assistance autorisé si le produit est endommagé ou d'autres problèmes apparaissent.
6.2. Si la connexion au secteur a été endommagée, elle doit être remplacée et vous devez procéder comme vous le feriez en cas de dommage.

7. Recyclage:

7.1. Ces produits électriques, câbles, piles, emballages et manuels ne doivent pas être mélangés aux ordures ménagères. Pour un recyclage correct, veuillez les apporter au bureau Creative Housewares le plus proche, où ils seront recyclés gratuitement.
7.2. Vous pouvez également contacter votre mairie ou le service des ordures ménagères pour connaître le point de collecte le plus proche. Une élimination correcte des produits permet d'économiser des ressources et de prévenir les effets négatifs sur la santé humaine et l'environnement.

2.5.1. Retire todos los embalajes externos e internos y compruebe que todas las piezas estén en su interior.
2.5.2. Retire la cubeta de hielo y lívela con agua limpia. Utilice agua limpia para lavar el depósito de agua.
2.5.3. Lave las columnas del evaporador con agua limpia o alcohol.
2.5.4. Mantenga la máquina de hielo alejada de la luz solar directa, el calor o la radiación. Coloque la máquina de hielo en posición horizontal y asegúrese de que haya un espacio de 15 cm entre los laterales y la parte trasera.

2.5. Apertura del embalaje:


2.5.1. Retire todos los embalajes externos e internos y compruebe que todas las piezas estén en su interior.
2.5.2. Retire la cubeta de hielo y lívela con agua limpia. Utilice agua limpia para lavar el depósito de agua.
2.5.3. Lave las columnas del evaporador con agua limpia o alcohol.
2.5.4. Mantenga la máquina de hielo alejada de la luz solar directa, el calor o la radiación. Coloque la máquina de hielo en posición horizontal y asegúrese de que haya un espacio de 15 cm entre los laterales y la parte trasera.

3. Funcionamiento:

3.1. Antes del primer uso
3.1.1. Antes de utilizar la máquina de hielo por primera vez, se recomienda limpiarla a fondo, como se indica en la sección "Limpieza".
3.1.2. Si la máquina es nueva o no se ha utilizado durante un tiempo prolongado, enjuague el depósito de agua y drene el agua por la salida de drenaje. Esto ayuda a eliminar cualquier olor residual o partículas de polvo.
3.1.3. Deseeche el hielo de los dos primeros ciclos de producción.
3.1.4. Al conectar la máquina a la corriente, los cubitos iniciales podrían ser más pequeños. Esto no significa que haya un mal funcionamiento.
3.2. Uso:
3.2.1. Abra la tapa frontal, retire la cubitera y añada agua al depósito. El nivel de agua no debe superar la línea de llenado máximo.
3.2.2. Vuelva a colocar la cubitera en la máquina, asegurándose de que esté bien colocada. Si no está en su lugar, presione suavemente el fondo de la cubitera hasta que quede firmemente instalada.
3.2.3. Pulse el botón "ON/OFF" del panel de control para encender la máquina. La luz indicadora de encendido se encenderá con frecuencia.
3.2.4. El primer ciclo de fabricación de hielo dura aproximadamente 9 minutos. El tamaño de los cubitos de hielo depende de la temperatura del agua y del ambiente.
3.2.5. Compruebe periódicamente el nivel de agua del depósito. Si el nivel de agua es demasiado bajo, la bomba no


3.3. Funcionamiento:
3.1. Antes del primer uso
3.1.1. Antes de utilizar la máquina de hielo por primera vez, se recomienda limpiarla a fondo, como se indica en la sección "Limpieza".
3.1.2. Si la máquina es nueva o no se ha utilizado durante un tiempo prolongado, enjuague el depósito de agua y drene el agua por la salida de drenaje. Esto ayuda a eliminar cualquier olor residual o partículas de polvo.
3.1.3. Deseeche el hielo de los dos primeros ciclos de producción.
3.1.4. Al conectar la máquina a la corriente, los cubitos iniciales podrían ser más pequeños. Esto no significa que haya un mal funcionamiento.
3.2. Uso:
3.2.1. Abra la tapa frontal, retire la cubitera y añada agua al depósito. El nivel de agua no debe superar la línea de llenado máximo.
3.2.2. Vuelva a colocar la cubitera en la máquina, asegurándose de que esté bien colocada. Si no está en su lugar, presione suavemente el fondo de la cubitera hasta que quede firmemente instalada.
3.2.3. Pulse el botón "ON/OFF" del panel de control para encender la máquina. La luz indicadora de encendido se encenderá con frecuencia.
3.2.4. El primer ciclo de fabricación de hielo dura aproximadamente 9 minutos. El tamaño de los cubitos de hielo depende de la temperatura del agua y del ambiente.
3.2.5. Compruebe periódicamente el nivel de agua del depósito. Si el nivel de agua es demasiado bajo, la bomba no

Português
Estimado cliente,
Obrigado por escolher comprar um produto da marca Mel-lerware. Graças a sua tecnologia, design e operação e ao facto de exceder os padrões de qualidade mais rigorosos, pode ser assegurado um uso totalmente satisfatório e uma longa vida útil do produto.
3.2.3. Pulse el botón "ON/OFF" del panel de control para encender la máquina. La luz indicadora de encendido se encenderá con frecuencia.
3.2.4. El primer ciclo de fabricación de hielo dura aproximadamente 9 minutos. El tamaño de los cubitos de hielo depende de la temperatura del agua y del ambiente.
3.2.5. Compruebe periódicamente el nivel de agua del depósito. Si el nivel de agua es demasiado bajo, la bomba no

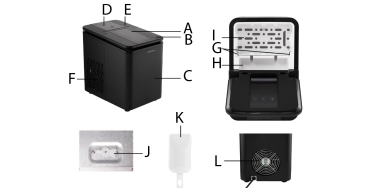

1. Descrição das peças:

A. Janela Transparente
B. Tapa Frontal
C. Corpo Principal
D. Painel de Controle
E. Painel Superior
F. Entrada de Ar
G. Sensor de Gelo Cheio
H. Painel da Pá de Gelo
I. Balde de Gelo
J. Tampão de Silicone
K. Pá de Gelo
L. Motor do Ventilador



1.2. Visor do Painel:

A. Indicador de Gelo Cheio
B. Indicador de Energia
C. Indicação de Falta de Água
D. Botão Liga/Desliga

2. Conselhos e avisos de segurança!

Leia estas instruções cuidadosamente antes de ligar o aparelho e guarde-as para referência futura. O não cumprimento e a não observação destas instruções podem provocar um acidente. Limpe todas as partes do produto, conforme indicado na secção de limpeza, antes de utilizar.

2.1. Utilização ou ambiente de trabalho:

2.1.1. Mantenha a área de trabalho limpa e bem iluminada. As áreas obstruídas e escuras convidam a acidentes.
2.1.2. Utilize o aparelho numa área bem ventilada.
2.1.3. Não coloque o aparelho sobre superfícies quentes, tais como placas de cozinha, queimadores a gás, fornos ou artigos semelhantes.
2.1.4. Mantenha as crianças e os espectadores afastados quando utilizar este aparelho.
2.1.5. Coloque o aparelho numa superfície horizontal, plana e estável, afastado de outras fontes de calor e em contacto com água.
2.1.6. Mantenha o aparelho afastado de materiais inflamáveis, como têxteis, cortinas, papelão ou papel, etc.

3.2.6. Quando la cubitera esté llena, la máquina dejará de producir hielo automáticamente. El luz indicadora de "lleno" se encenderá y sonará una alarma. La producción de hielo se reanudará automáticamente una vez que el nivel de hielo descienda por debajo del nivel de detección infrarroja.
3.2.7. Para detener o cancelar la producción de hielo, pulse el botón de encendido/apagado. Esto pondrá la máquina en modo de espera.
3.2.8. Se recomienda cambiar el agua cada 24 horas para mantener la limpieza. Si la máquina no se va a utilizar durante un período prolongado, desenchúfela, vacíe el depósito y séquelo.
3.3. Autolimpieza:
3.3.1. Para iniciar el modo de autolimpieza, mantenga pulsado el botón de encendido durante 3 segundos mientras la máquina funciona con normalidad. La bomba comenzará a funcionar, circulando agua desde el depósito hasta el depósito de hielo durante aproximadamente 10 minutos antes de entrar automáticamente en modo de espera.
3.3.2. Puede salir del modo de autolimpieza en cualquier momento pulsando el botón de encendido.

3.3. Autolimpieza:


3.3.1. Para iniciar el modo de autolimpieza, mantenga pulsado el botón de encendido durante 3 segundos mientras la máquina funciona con normalidad. La bomba comenzará a funcionar, circulando agua desde el depósito hasta el depósito de hielo durante aproximadamente 10 minutos antes de entrar automáticamente en modo de espera.
3.3.2. Puede salir del modo de autolimpieza en cualquier momento pulsando el botón de encendido.

4. Limpieza:

4.1.1. Retire la cubitera de la máquina.
4.1.2. Localice el tapón de silicona en la parte inferior de la máquina, ábralo y vacíe toda el agua del depósito.
4.1.3. Con un paño suave diluido con un limpiador neutro o agua tibia, limpie el depósito de agua y el exterior de la máquina.
4.1.4. Enjuague el interior con agua limpia.
4.1.5. Vuelva a colocar el tapón de silicona en la parte inferior de la máquina, asegurándose de que esté bien fijado.
4.1.6. El mantenimiento diario es fundamental para mantener la máquina de hielo limpia e higiénica. Con el tiempo, los cambios de temperatura, la calidad del agua y el envejecimiento del producto pueden provocar la formación de sarro, moho y óxido en el hielo. Preste especial atención al mantenimiento diario del depósito de agua para mantenerlo limpio.
4.1.7. El olor en el hielo puede deberse a la calidad del agua. No es un defecto y suele desaparecer tras los primeros usos. Si el olor persiste, se recomienda usar un limpiador para máquinas de hielo o ácido cítrico para limpiar la máquina. No consuma hielo con olor para evitar molestias o enfermedades.
4.1.8. Para garantizar la calidad del hielo, cambie el agua conectado a la red eléctrica.
4.1.9. Si no va a utilizar la máquina de hielo durante un período prolongado, águela, desenchúfela y drene el agua restante por el desagüe. Guarde la máquina en un lugar seco.

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

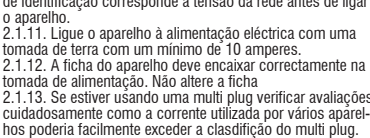

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

2.2. Segurança pessoal:

2.2.1. **CUÍDAO:** Não deixe o aparelho sem vigilância durante o uso, pois existe o risco de acidente.
2.2.2. Não toque nas partes rotativas do aparelho, pois pode causar ferimentos graves.
2.2.3. Este aparelho é apenas para uso doméstico, não para uso industrial ou profissional. Não se destina a ser utilizado por hóspedes em ambientes de hospitalidade, tais como bed and breakfast, hotéis, motéis e outros tipos de ambientes residenciais, mesmo em casas de fazenda, áreas do pessoal de cozinha em lojas, escritórios e outros ambientes de trabalho.
2.2.4. Este aparelho não deve ser utilizado por pessoas (incluindo crianças) com capacidades físicas, sensoriais ou mentais reduzidas, ou com falta de experiência e conhecimento, a não ser que tenham recebido supervisão ou instruções sobre a utilização do aparelho por uma pessoa responsável pela sua segurança.
2.2.5. Este aparelho não é um brinquedo. As crianças devem ser supervisionadas para garantir que não brinquem com o aparelho.
2.3. Uso e cuidado:
2.3.1. Desenrole completamente o cabo de alimentação do aparelho antes de cada utilização.
2.3.2. Não utilize o aparelho se as peças ou acessórios não estiverem corretamente encaixados.

2.3. Uso e cuidado:

2.3.1. Desenrole completamente o cabo de alimentação do aparelho antes de cada utilização.
2.3.2. Não utilize o aparelho se as peças ou acessórios não estiverem corretamente encaixados.

5. Análisis y manejo de averías:

Falla:	Causa:	Solución:
La máquina está funcionando pero no produce hielo.	El compresor está en protección de arranque o hay una fuga de refrigerante.	Espera 30 minutos para que la máquina funcione con normalidad. Si sigue sin arrancar, contacte con un servicio técnico.
El ciclo de fabricación de hielo es demasiado largo.	1. La cubeta de hielo contiene demasiadas piezas. 2. La temperatura del agua es demasiado baja.	1. Ajuste el evaporador. 2. Cambie el agua del depósito por agua entre 5 °C y 32 °C.
El depósito de hielo está lleno, pero la luz indicadora no está encendida.	La máquina está en un lugar con mucha luz, lo que afecta al sensor infrarrojo.	Traslade la máquina a un lugar más oscuro.
El panel de la pala de hielo está atascado.	Hay demasiado hielo en la cubeta.	Retire un poco de hielo de la cubeta.
La máquina no funciona.	El sensor de hielo lleno está roto.	Deje de usar la máquina y contacte a su proveedor para su re

6. Anomalías y reparación:


6.1. Lleve el aparato a un centro de asistencia autorizado si el producto está dañado o si surgen otros problemas.
6.2. Si la conexión a la red eléctrica se ha dañado, debe ser sustituida y debe proceder como lo haría en caso de daños.

7. Reciclaje:

7.1. Estos productos eléctricos, cables, baterías, embalajes y el manual no deben mezclarse con la basura doméstica general. Para un reciclaje adecuado, lívelos a la oficina de Creative Housewares más cercana, donde se aceptarán para su reciclaje gratuito.
7.2. Como alternativa, póngase en contacto con su autoridad local o con el servicio de recogida de residuos domésticos para obtener más información sobre el punto de recogida designado más cercano. La correcta eliminación de los productos ahorra recursos y previene efectos negativos en la salud humana y el medio ambiente.

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

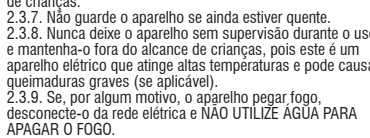

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

2.1.7. Não coloque material inflamável perto do aparelho..
2.1.8. Não utilize o aparelho em associação com um programador, temporizador ou outro dispositivo que olique automaticamente.
2.1.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.
2.1.10. Certifique-se de que a tensão indicada na etiqueta de identificação corresponde à tensão da rede antes de ligar o aparelho.
2.1.11. Ligue o aparelho à alimentação eléctrica com uma tomada de terra com um mínimo de 10 amperes.
2.1.12. A ficha do aparelho deve encaixar correctamente na tomada de alimentação. Não altere a ficha
2.1.13. Se estiver usando uma multi plug verificar avaliações cuidadosamente como a corrente utilizada por vários aparelhos poderia facilmente exceder a classificação do multi plug.
2.1.14. Utilize o aparelho somente com o controlador de temperatura específico fornecido.
2.1.15. Se alguma das partes do aparelho quebrar, desconecte-o imediatamente da rede elétrica para evitar a possibilidade de choque elétrico.
2.1.16. Não utilize o aparelho se ele tiver caído no chão ou se houver sinais visíveis de danos.
2.1.17. Não force o cabo de alimentação. Nunca use o cabo de alimentação para levantar, transportar ou desconectar o aparelho da tomada.
2.1.18. Não enrolle o cabo de alimentação ao redor do aparelho.
2.1.19. Não corte ou amasse o cabo de alimentação.
2.1.20. Não deixe o cabo de alimentação pendurado ou em contato com as superfícies quentes do aparelho.
2.1.21. Verifique o estado do cabo de alimentação. Cabos danificados ou emaranhados aumentam o risco de choque elétrico.
2.1.22. O aparelho não é adequado para uso externo.
2.1.23. O cabo de alimentação deve ser examinado regularmente para verificar se há sinais de danos, se estiver danificado, o aparelho não deve ser utilizado.
2.1.24. Não toque no plugue com as mãos molhadas.

2.5. Abertura da embalagem:

2.5.1. Remova toda a embalagem externa e interna e verifique se todas as peças estão dentro.
2.5.2. Retire o balde de gelo e lave-o em água limpa. Use água limpa para lavar o reservatório de água.
2.5.3. Lave as colunas do evaporador com água limpa ou álcool.
2.5.4. Mantenha a máquina de gelo longe da luz solar direta, calor ou radiação. Coloque a máquina de gelo horizontalmente e certifique-se de que haja um espaço de 15 cm entre as laterais e a parte traseira.

3. Operação: